

SLP-WHG-TSN

8th Gen Intel® Core™ Processor Core™ SoC i7/i5/i3 &
Celeron® BGA Processor Fanless Expandable Slot PC with
TSN Gigabit Ethernet PCIe NIC Card

Quick Reference Guide

2nd Ed –12 July 2023

Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.

Part No. E2017NAM0A1R

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Content

| | |
|---|-----------|
| 1. Getting Started | 6 |
| 1.1 Safety Precautions | 6 |
| 1.2 Packing List | 6 |
| 1.3 System Specifications | 7 |
| 1.4 System Overview..... | 10 |
| 1.4.1 SLP-WHG Rear View | 10 |
| 1.5 System Dimensions..... | 11 |
| 1.5.1 SLP-WHG Front & Top view | 11 |
| 2. Hardware Configuration | 12 |
| 2.1 SLP-WHG connector mapping | 13 |
| 2.1.1 Serial Port 1/2 connector (COM1/2)..... | 13 |
| 2.1.2 Serial Port 3/4 connector (COM3/4)..... | 13 |
| 2.2 EMX-WHLGP Overviews..... | 14 |
| 2.2.1 EMX-WHLGP | 14 |
| 2.3 EMX-WHLGP Jumper & Connector list | 15 |
| 2.4 EMX-WHLGP Setting Jumpers & Connectors | 17 |
| 2.4.1 Serial port 1/2 pin9 signal select (JCOM1-RI-RS485) | 17 |
| 2.4.2 Serial port 1/2 pin9 signal select (JCOM2-RI-RS485) | 17 |
| 2.4.3 LVDS Back Light power selection (JSBKL1) | 18 |
| 2.4.4 AT/ATX Power Mode Select (JSATX1)..... | 18 |
| 2.4.5 Clear CMOS (JCMOS1)..... | 19 |
| 2.4.6 LCD Inverter connector (JBKL1)..... | 19 |
| 2.4.7 Serial port 1 connector (COM1) | 20 |
| 2.4.8 Serial port 2 connector (COM2) | 20 |
| 2.4.9 General purpose I/O connector (DIO1)..... | 21 |
| 2.4.10 SPI connector (JSPI1)..... | 21 |
| 2.4.11 Serial port 3-6 connector (COM3-6)..... | 22 |
| 2.4.12 SATA Power connector (SPWR1)..... | 23 |
| 2.4.13 CPU Fan connector (JFAN1) | 23 |
| 2.4.14 USB connector 1(USB1) | 24 |
| 2.4.15 USB connector 2(USB2) | 24 |
| 2.4.16 LVDS connector (LVDS1) | 25 |
| 2.4.17 Front Audio connector (FAUD1)..... | 26 |
| 2.4.18 EC Debug (JEC_DEBUG)..... | 26 |
| 2.4.19 Battery connector (BAT1)..... | 27 |

SLP-WHG-TSN

| | | |
|-------------|--|-----------|
| 2.4.20 | PS/2 keyboard & mouse header (KB/MS) | 27 |
| 2.4.21 | Miscellaneous setting connector 1 (FPT1) | 28 |
| 2.4.22 | Miscellaneous setting connector 2 (FPT2) | 28 |
| 2.4.23 | LED indicator connector 1 (LED1) | 29 |
| 2.4.24 | LED indicator connector 2 (LED2) | 29 |
| 2.4.25 | LED indicator connector 3 (LED3) | 30 |
| 2.4.26 | Speaker connector (SPK1) | 30 |
| 2.4.27 | J12C connector (J12C1) | 31 |
| 2.4.28 | LPC connector (JLPC1) | 31 |
| 2.4.29 | CPU Heatsink Heater Connector (JHT1/2/3/4/5/6) | 32 |
| 2.4.30 | LED Indicator for Heater (JHT_LED1) | 32 |
| 2.4.31 | Gold Finger (GF) | 33 |
| 2.4.32 | Power connector (PWR1) | 35 |
| 3 | BIOS Setup | 36 |
| 3.1 | Introduction | 37 |
| 3.2 | Starting Setup | 37 |
| 3.3 | Using Setup | 38 |
| 3.4 | Getting Help | 39 |
| 3.5 | In Case of Problems | 39 |
| 3.6 | BIOS setup | 40 |
| 3.6.1 | Main Menu | 40 |
| 3.6.1.1 | System Language | 41 |
| 3.6.1.2 | System Date | 41 |
| 3.6.1.3 | System Time | 41 |
| 3.6.2 | Advanced Menu | 41 |
| 3.6.2.1 | CPU Configuration | 42 |
| 3.6.2.2 | Power & Performance | 42 |
| 3.6.2.2.1 | CPU - Power Management Control | 43 |
| 3.6.2.2.1.1 | Config TDP Configurations | 43 |
| 3.6.2.2.2 | GT - Power Management Control | 44 |
| 3.6.2.3 | PCH-FW Configuration | 45 |
| 3.6.2.3.1 | Firmware Update Configuration | 46 |
| 3.6.2.4 | Trusted Computing | 46 |
| 3.6.2.5 | ACPI Settings | 47 |
| 3.6.2.6 | IT8528 Super IO Configuration | 47 |
| 3.6.2.6.1 | Serial Port 1 Configuration | 48 |
| 3.6.2.6.2 | Serial Port 2 Configuration | 49 |
| 3.6.2.6.3 | Serial Port 3 Configuration | 49 |
| 3.6.2.6.4 | Serial Port 4 Configuration | 50 |
| 3.6.2.6.5 | Serial Port 5 Configuration | 50 |

| | | |
|-------------|--|----|
| 3.6.2.6.6 | Serial Port 6 Configuration..... | 51 |
| 3.6.2.7 | EC 8528 HW monitor..... | 51 |
| 3.6.2.8 | S5 RTC Wake Settings..... | 52 |
| 3.6.2.9 | Serial Port Console Redirection..... | 52 |
| 3.6.2.9.1 | Legacy Serial Redirection Port..... | 53 |
| 3.6.2.10 | USB Configuration..... | 53 |
| 3.6.2.11 | NVMe controller and Drive information..... | 54 |
| 3.6.2.12 | Network Stack Configuration..... | 55 |
| 3.6.3 | Chipset..... | 55 |
| 3.6.3.1 | System Agent (SA) Configuration..... | 56 |
| 3.6.3.1.1 | Memory Configuration..... | 56 |
| 3.6.3.1.2 | Graphics Configuration..... | 57 |
| 3.6.3.2 | PCH-IO Configuration..... | 57 |
| 3.6.3.2.1 | PCI Express Configuration..... | 58 |
| 3.6.3.2.1.1 | PCIe Root Port 8(LAN2-I210)..... | 58 |
| 3.6.3.2.1.2 | PCIe Root Port 9(LAN3-I210/GF slot)..... | 59 |
| 3.6.3.2.1.3 | PCIe Root Port 10(M.2 KeyA)..... | 60 |
| 3.6.3.2.1.4 | PCIe Root Port 11(M.2 KeyB/SATA0)..... | 61 |
| 3.6.3.2.1.5 | PCIe Root Port 13(GP PCIe4)..... | 62 |
| 3.6.3.2.2 | SATA And RST Configuration..... | 63 |
| 3.6.3.2.3 | HD Audio Configuration..... | 64 |
| 3.6.3.3 | Board & Panel Configuration..... | 64 |
| 3.6.4 | Security..... | 65 |
| 3.6.4.1 | Secure Boot..... | 66 |
| 3.6.4.1.1 | Restore Factory Keys..... | 66 |
| 3.6.4.1.2 | Reset To Setup Mode..... | 67 |
| 3.6.4.1.3 | Key Management..... | 67 |
| 3.6.5 | Boot..... | 68 |
| 3.6.6 | Save and Exit..... | 68 |
| 3.6.6.1 | Save Changes and Reset..... | 69 |
| 3.6.6.2 | Discard Changes and Reset..... | 69 |
| 3.6.6.3 | Restore Defaults..... | 69 |
| 3.6.6.4 | Launch EFI Shell from filesystem device..... | 69 |

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x SLP-WHG Onboard 8th Gen Intel® Core™ SoC i7/i5/i3 & Celeron® BGA Processor with TSN PCIe card
- Other major components include the following:
 - Screw kit
 - Wall Mount Kit
 - Accessory box



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

| System Information | |
|----------------------------------|--|
| Processor | Onboard 8th Gen Intel® Core™ SoC i7/i5/i3 & Celeron® BGA Processor (Whiskey lake-U Series) |
| System Memory | 2 x 260-pin DDR4 2133 MHz SO-DIMM socket, supports up to 32GB Max (non ECC only) |
| BIOS Information | AMI uEFI BIOS 256 Mbit SPI Flash ROM |
| Watchdog Timer | H/W Reset, 1sec. ~ 65535sec. |
| H/W Status Monitor | Monitoring CPU & System Temperature and Voltage |
| TPM | Onboard TPM 2.0 |
| SBC | EMX-WHLGP |
| Expansion | |
| M.2 (Key-X, Size, Signal) | 1 x M.2 Key-A 2230 for Wi-Fi & BT Module 1 x M.2 Key-B 3042/2242/2260/2280, support SATA 3/PCIe III x 1/USB 2.0 and internal SIM slot 1 |
| PCIe (Gen X, Lanes) | 1 x PCIe*1 slot 1 x PCIe*4 slot w/ASIX TSN Card: Quad Port TSN Gigabit Ethernet PCIe NIC Card |
| Storage | |
| M.2 (Key-X, Size, Signal) | 1 x M.2 Key-B 3042/2242/2260/2280, support SSD (share with expansion slot) |
| 2.5" Drive Bay (Height) | 1 x 2.5" Drive Bay (internal) |
| Edge I/O (Front) | |
| USB Port | 3 x USB3.1 Gen1 1 x USB Type C w/o ALT mode |
| COM Port | 4 x RS-232 |
| HDMI | 2 x HDMI 3840 x 2160 @ 30 Hz, 1 x HDMI 2560 x 1600 @ 30 Hz |
| Audio | Line-Out, Mic-in |
| LAN Port | 3 x RJ-45 |
| TSN Port | 4 x TSN Gigabit Ethernet |
| PS/2 KB & Mouse | 1 x PS/2 Keyboard 1 x PS/2 Mouse |
| Power Button | 1 x Power On/Off |
| Wire-Control Power On/Off | 2-Pin Terminal Block |

SLP-WHG-TSN

| | |
|-------------------------------------|--|
| LED Indicator | 1 x HDD LED 1 x Power LED |
| Antenna | Optional: 2 x Wireless LAN Antenna |
| Display | |
| Graphic Chipset | Intel® Processor Graphics |
| Resolution | HDMI :2 x 3840 x 2160 @ 30 Hz, 1x 2560 x 1600@ 30 Hz |
| Audio | |
| Audio Codec | Realtek ALC888S |
| Ethernet | |
| LAN Chipset | 1 x Intel® I219-LM 2 x Intel® I210-IT |
| Power Requirement | |
| DC Input | DC in +12V ~ +24V), wide voltage |
| DC Input Connector | 3-Pin Terminal Block (V+, V-, GND) |
| Power Mode | AT/ATX (ATX is default setting) |
| Adapter | 24V/7.5A AC/DC 180W adapter (Phoenix connector), Optional |
| Mechanical & Environment | |
| Operating Temp. | -20~50°C (-4°F ~ 122°F) w/Industrial SSD and memory, ambient w/ 0.5m/s air flow |
| Storage Temp. | -40°C ~ 75°C (-40 ~ 167°F) |
| Operating Humidity | 40°C @ 95% Relative Humidity, Non-condensing |
| Dimension (W*L*H) | 217 mm x 115 mm x 220 mm |
| Weight | 2.6 kg (System) 3.4 kg (w/Package) |
| Vibration Test | <p>Random Vibration Operation:</p> <ol style="list-style-type: none"> 1. PSD: 0.03622G²/Hz, 1.5 Grms 2. operation mode 3. Test Frequency: 5-500Hz 4. Test Axis: X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test: Fh 7. Storage: SSD <p>Sine Vibration test (Non-operation)</p> <ol style="list-style-type: none"> 1 Test Acceleration : 2G 2 Test frequency: 5~500 Hz 3 Sweep : 1 Oct/ per one minute. (logarithmic) 4 Test Axis: X,Y and Z axis 5 Test time :10 min. each axis |


| | |
|----------------------------------|--|
| | <p>6 System condition : Non-Operating mode</p> <p>7. Reference IEC 60068-2-6 Testing procedures</p> <p>Package vibration test</p> <ol style="list-style-type: none"> 1. PSD: 0.026G²/Hz, 2.16 Grms 2. Non-operation mode 3. Test Frequency : 5-500Hz 4. Test Axis: X,Y and Z axis 5. 30 min. per each axis 6. IEC 60068-2-64 Test: Fh |
| Shock Test | <ol style="list-style-type: none"> 1. Wave form : Half Sine waves 2. Acceleration Rate : 10g for operation mode 3. Duration Time : 11ms 4. No. of Shock : Z axis 300 times 5. Test Axis: Z axis 6. Operation mode 7. Reference IEC 60068-2-29 Testing procedures <p>Test Eb : Bump Test</p> |
| Drop Test | <p>Package drop test</p> <ol style="list-style-type: none"> 1. One corner, three edges, six faces 2. ISTA 2A, IEC-60068-2-32 Test: Ed |
| Software Support | |
| OS Information | Win10, Linux |
| Software Support | |
| Certification Information | CE/FCC Class A |
| In-Box Accessory | |
| Accessory | <ol style="list-style-type: none"> 1. 24V/7.5A AC/DC 180W Adapter 2. Wall mount kit 3. 2-pin terminal block |



Note: Specifications are subject to change without notice.

1.4 System Overview

1.4.1 SLP-WHG Rear View

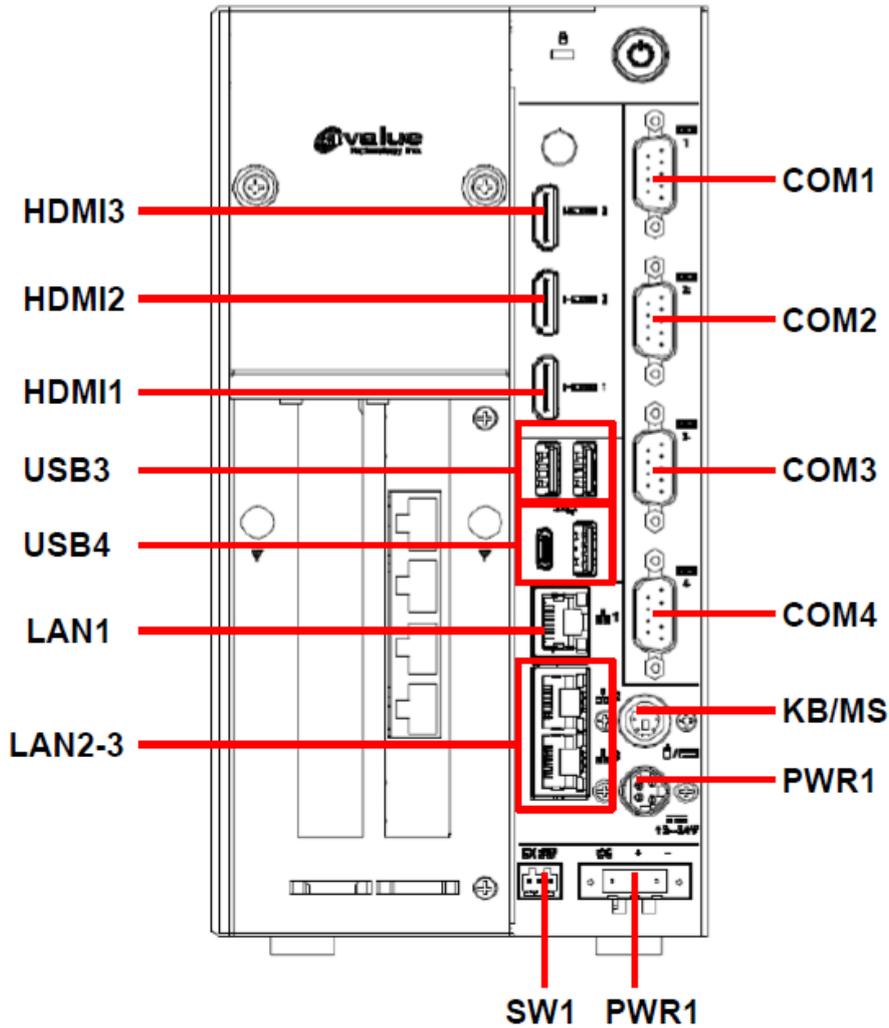


Connectors

| Label | Function | Note |
|-----------|------------------------------|----------------------------|
| HDMI1/2/3 | HDMI connector 1/2/3 | |
| USB3/4 | USB connector 3/4 | |
| LAN1/2-3 | RJ-45 Ethernet 1/2-3 | |
| COM1/2 | Serial Port 1 connector | 5 x 2 header, pitch 2.00mm |
| COM3/4 | Serial Port 3-6 connector | 5 x 2 header, pitch 2.00mm |
| KB&MS | PS/2 keyboard & mouse header | 4 x 2 header, pitch 2.00mm |
| PWR1 | Power connector | 2 x 2 wafer, pitch 4.20mm |
| PWR1 | DC Input connector | 3 x 1 wafer, pitch 5.08mm |
| SW1 | Power Button connector | |

1.5 System Dimensions

1.5.1 SLP-WHG Front & Top view

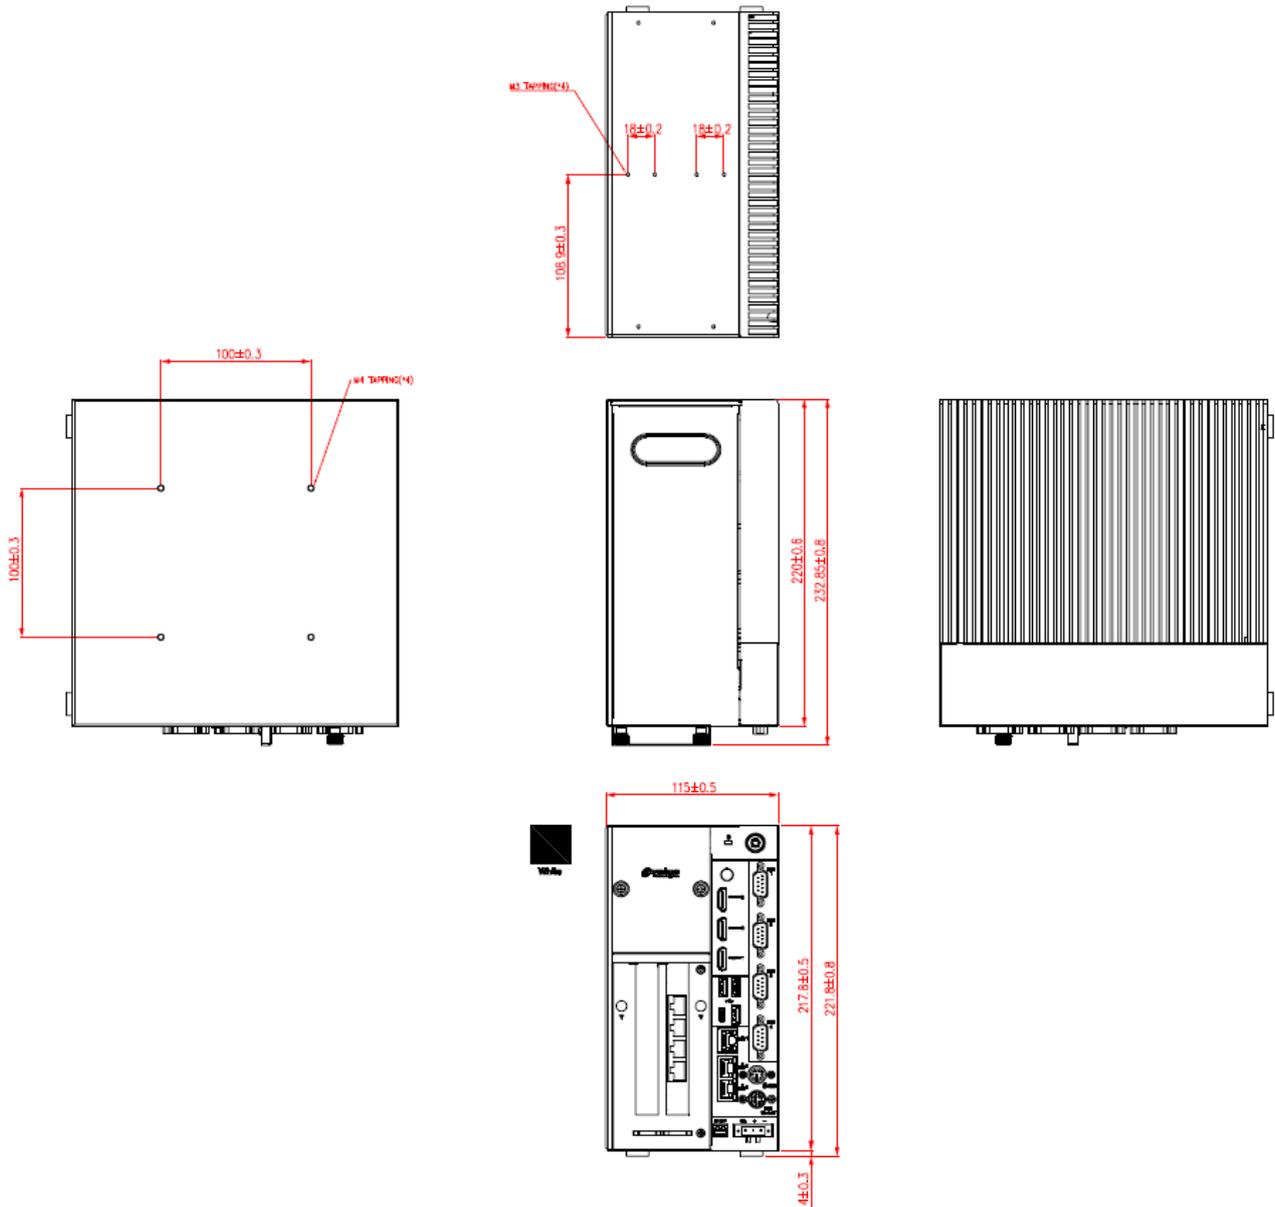

(Unit: mm)

2. Hardware Configuration

Jumper and Connector Setting

For advanced information, please refer to:

- 1- EMX-WHLGP User's Manual





Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>



2.1 SLP-WHG connector mapping

2.1.1 Serial Port 1/2 connector (COM1/2)

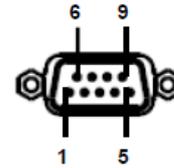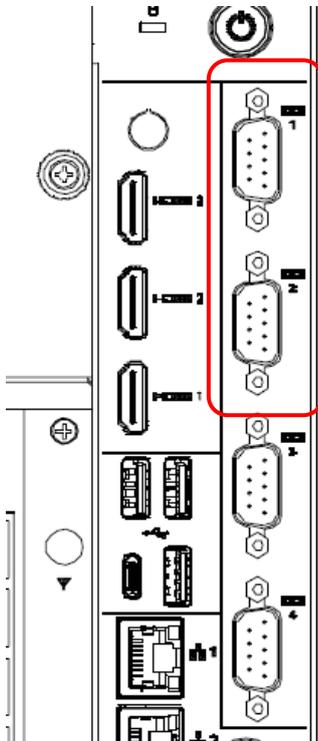

| Pin | RS-232 | RS-422 | RS-485 |
|-----|--------|---------|----------|
| 1 | DCD# | TXD422- | 485DATA- |
| 2 | RXD | TXD422+ | 485DATA+ |
| 3 | TXD | RXD422+ | |
| 4 | DTR# | RXD422- | |
| 5 | GND | | |
| 6 | DSR# | | |
| 7 | RTS# | | |
| 8 | CTS# | | |
| 9 | RI# | | |



2.1.2 Serial Port 3/4 connector (COM3/4)

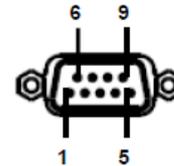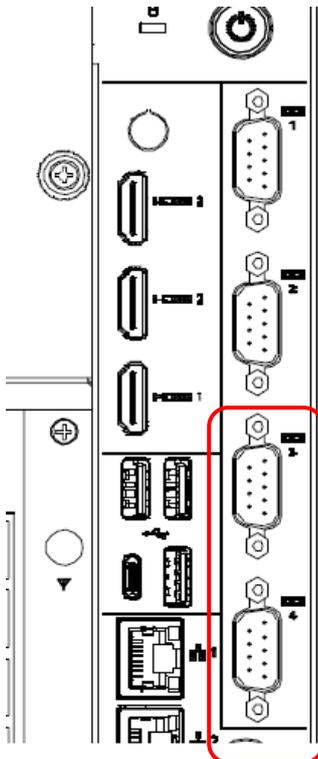

| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| | | 9 | NRI# |
| NCTS# | 8 | 7 | NRTS# |
| NDSR# | 6 | 5 | GND |
| NDTR# | 4 | 3 | NTXD |
| NRXD | 2 | 1 | NDCD# |

2.2 EMX-WHLGP Overviews

2.2.1 EMX-WHLGP

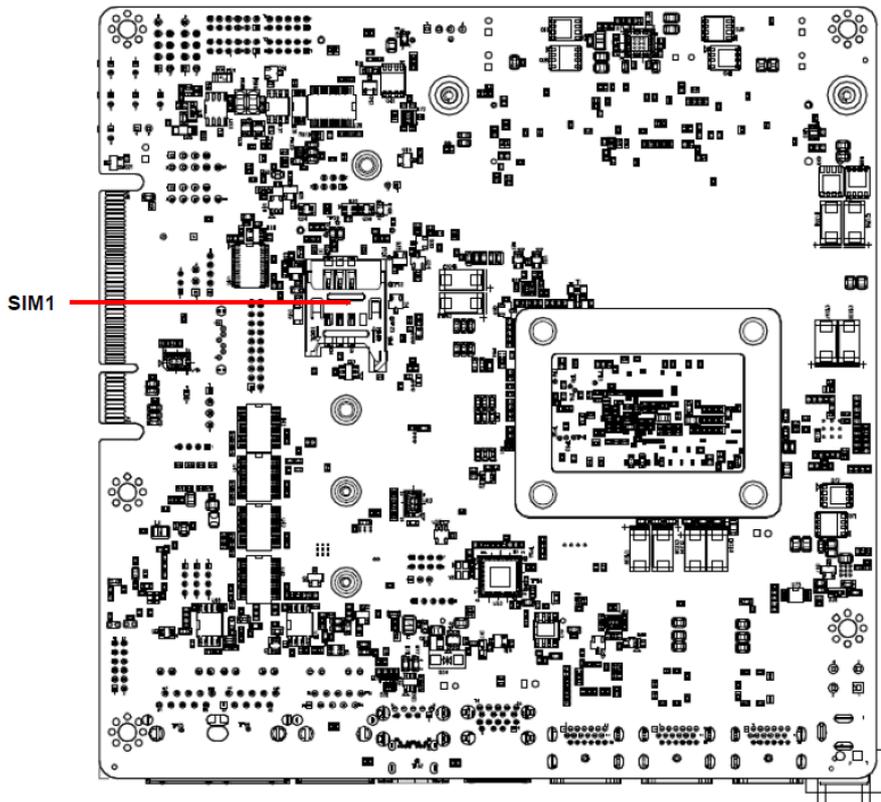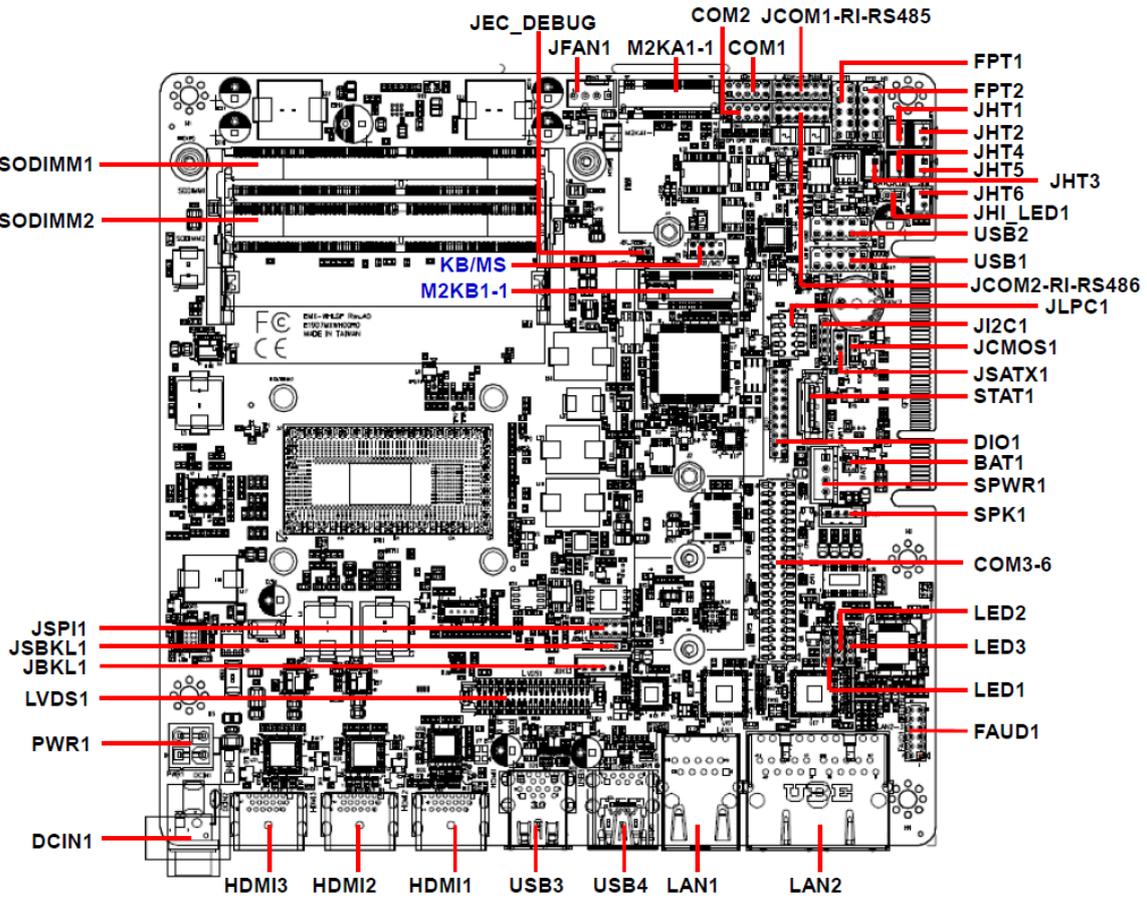

2.3 EMX-WHLGP Jumper & Connector list

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

| Label | Function | Note |
|----------------|------------------------------------|----------------------------|
| JSBKL1 | LVDS Back Light power selection | 3 x 1 header, pitch 2.00mm |
| JSATX1 | AT/ATX Power Mode Select | 3 x 1 header, pitch 2.54mm |
| JCOMS1 | Clear CMOS | 3 x 1 header, pitch 2.00mm |
| JCOM1-RI-RS485 | Serial port 1/2 pin9 signal select | 6 x 2 header, pitch 2.00mm |
| JCOM2-RI-RS486 | Serial port 1/2 pin9 signal select | 6 x 2 header, pitch 2.00mm |

Connectors


| Label | Function | Note |
|-----------|-------------------------------------|--|
| FPT1/2 | Miscellaneous setting connector 1/2 | 5 x 2 header, pitch 2.54mm |
| SODIMM1/2 | 206-pin DDR4 SO-DIMM socket | |
| FAUD1 | Front Audio connector | 6 x 2 header, pitch 2.00mm |
| JBKL1 | LCD Inverter connector | 5 x 1 wafer, pitch 2.00mm |
| JSPI1 | SPI connector | 4 x 2 header, pitch 2.00mm |
| JEC_DEBUG | EC Debug | 2 x 1 header, pitch 2.00mm |
| COM1/2 | Serial Port 1/2 connector | 5 x 2 header, pitch 2.00mm |
| COM3-6 | Serial Port 3-6 connector | 20 x 2 header, pitch 2.00mm |
| DIO1 | General purpose I/O connector | 10 x 2 header, pitch 2.00mm |
| SPK1 | Speaker connector | 4 x 1 wafer, pitch 2.00mm |
| LVDS1 | LVDS Connector | 20 x 2 wafer, pitch 1.25mm |
| USB1/2 | USB connector 1/2 | 5 x 2 header, pitch 2.54mm |
| USB3/4 | USB connector 3/4 | |
| LAN1/2 | RJ-45 Ethernet 1/2 | |
| LED1/2/3 | LED indicator connector 1/2/3 | 4 x 1 header, pitch 2.00mm |
| M2KA1-1 | M.2 2230 Key A slot | |
| M2KB1-1 | M.2 3042/2242/2260/2280 Key B Slot | |
| JLPC | LPC connector | 5 x 2 header, pitch 2.00mm |
| DCIN1 | DC Power-in connector | |
| PWR1 | Power connector | 2 x 2 wafer, pitch 4.20mm |
| SATA1 | Serial ATA connector | SATA1 is not functioning in EMX-SKLGP-3855 SKU |

SLP-WHG-TSN


| | | |
|----------------------|-------------------------------|----------------------------|
| SPWR1 | SATA Power connector | 4 x 1 wafer, pitch 2.54mm |
| JI2C1 | JI2C connector | 5 x 1 header, pitch 2.00mm |
| HDMI1/2/3 | HDMI connector 1/2/3 | |
| JFAN1 | CPU Fan connector | 1 x 4 wafer, pitch 2.54 mm |
| SIM1 | SIM card slot | |
| KB/MS | PS/2 keyboard & mouse header | 4 x 2 header, pitch 2.00mm |
| BAT1 | Battery connector | 2 x 1 wafer, pitch 1.25mm |
| JHT_LED | LED Indicator for Heater | 2 x 1 header, pitch 2.54mm |
| JHT1/23/4/5/6 | CPU Heatsink Heater Connector | 2 x 1 header, pitch 2.00mm |
| GF | Gold Finger | |

2.4 EMX-WHLGP Setting Jumpers & Connectors


2.4.1 Serial port 1/2 pin9 signal select (JCOM1-RI-RS485)

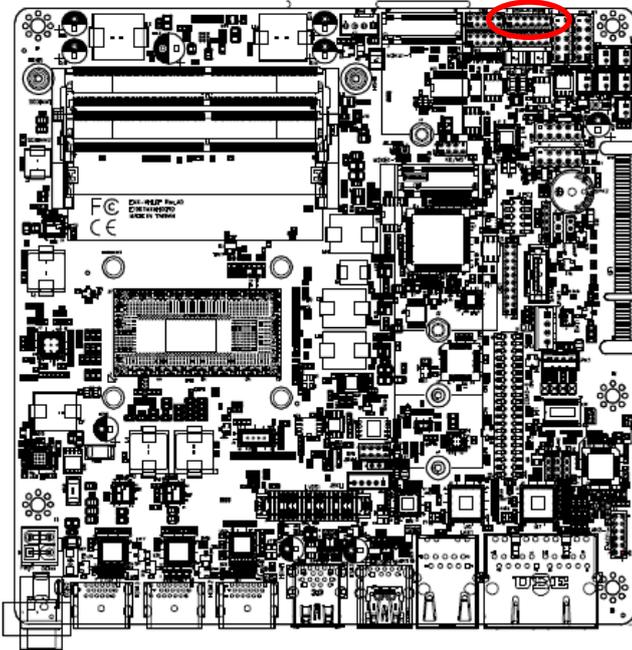


Ring*

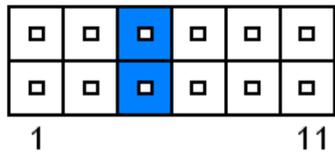

+12V

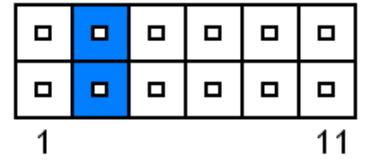


+5V

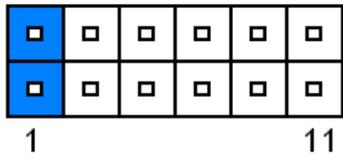


* Default


2.4.2 Serial port 1/2 pin9 signal select (JCOM2-RI-RS485)

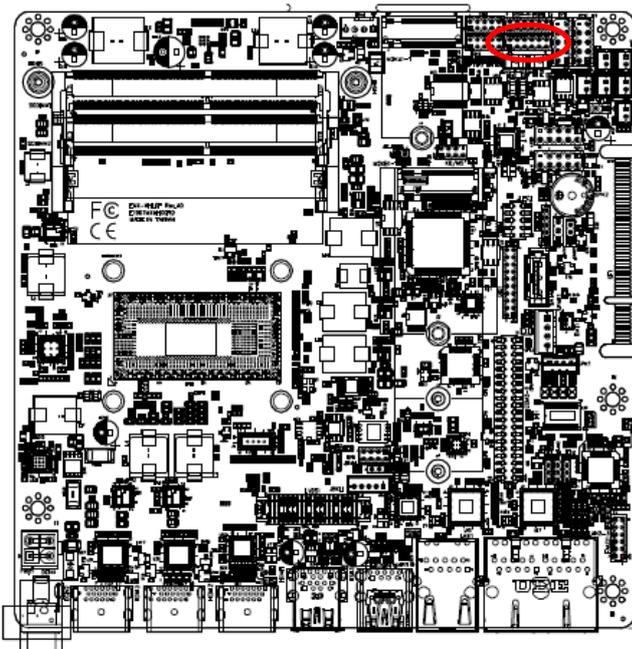


Ring*

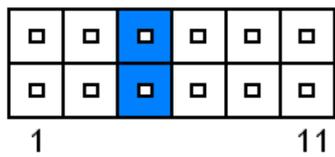

+12V

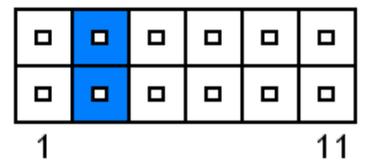


+5V

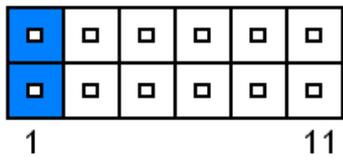


* Default


2.4.3 LVDS Back Light power selection (JSBKL1)

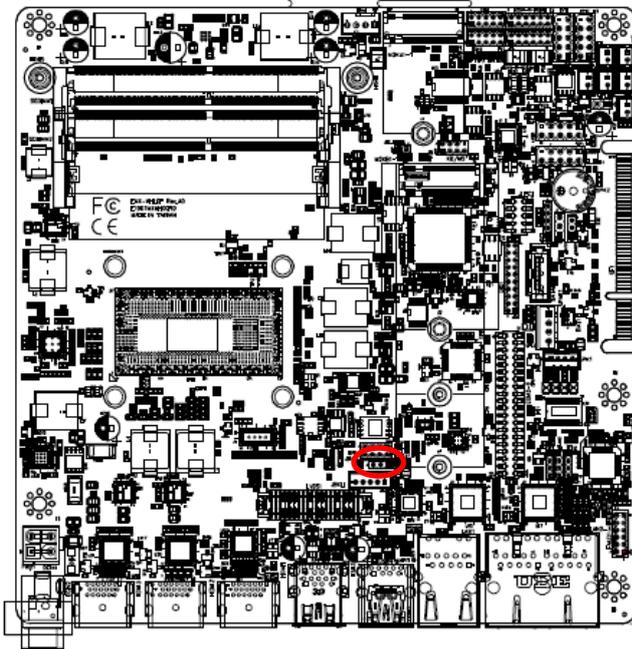

PWM Mode*

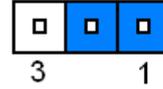


DC Mode

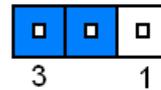


* Default


2.4.4 AT/ATX Power Mode Select (JSATX1)

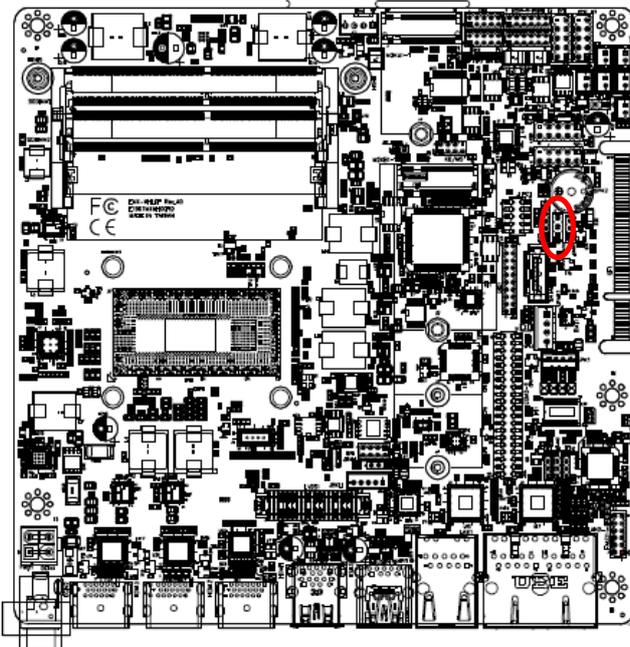

ATX*

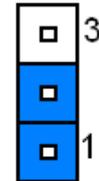


AT

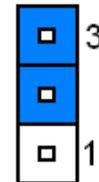


* Default


2.4.5 Clear CMOS (JCMOS1)

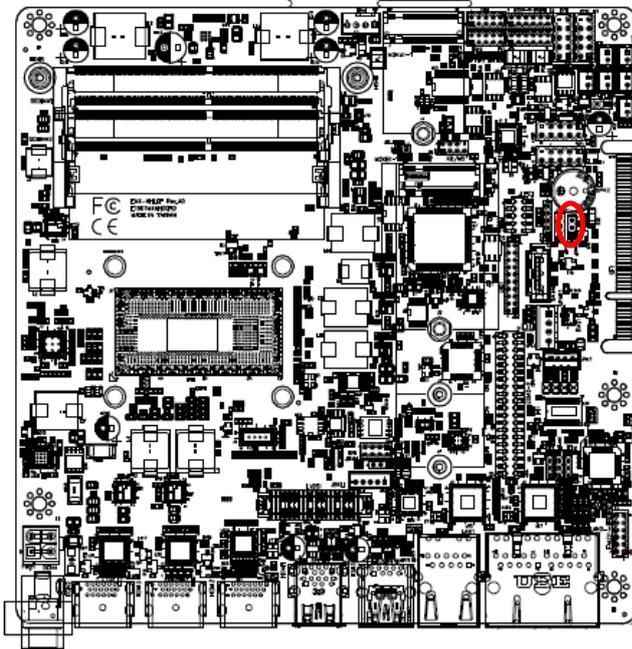

Protect*


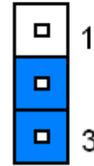


Clear CMOS

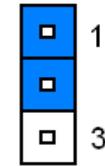



* Default

2.4.6 LCD Inverter connector (JBKL1)

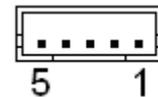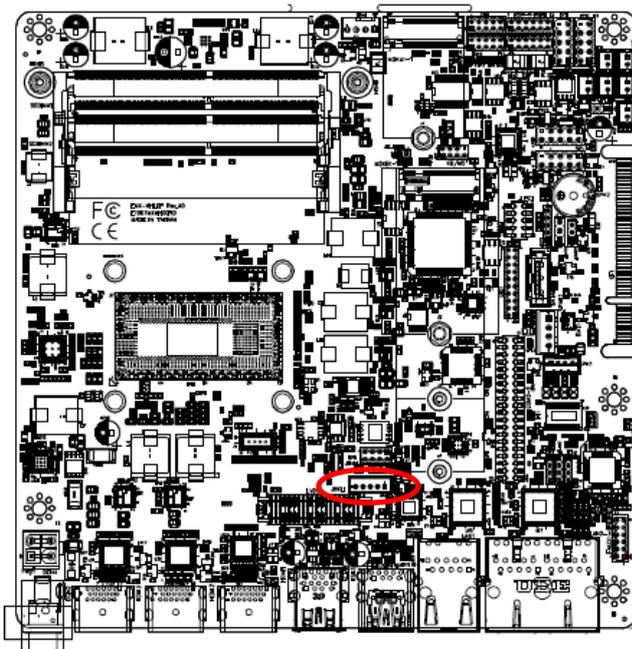



| PIN | Signal |
|-----|--------------|
| 1 | +12V |
| 2 | GND |
| 3 | LVDS_BKLT_EN |
| 4 | LVDS_BKLTCTL |
| 5 | +5V |

2.4.7 Serial port 1 connector (COM1)

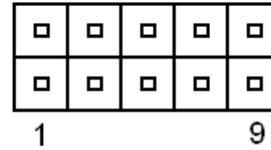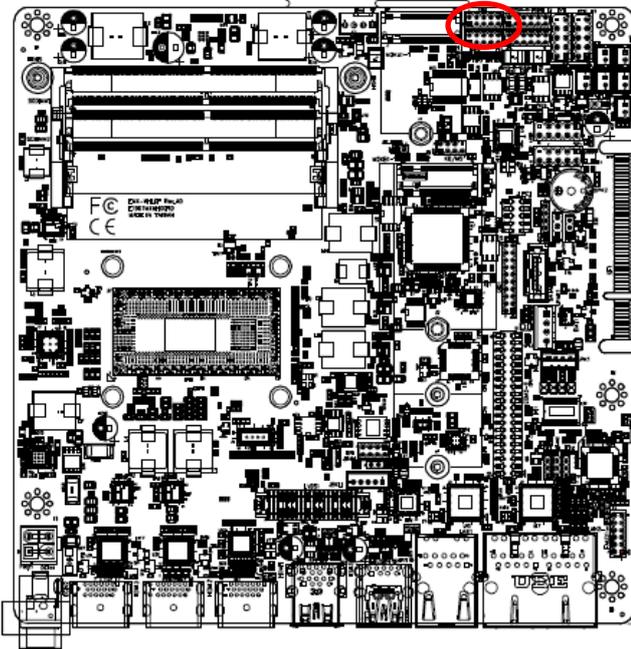



| Signal | PIN | PIN | Signal |
|------------|-----|-----|------------|
| COM_DCD#_1 | 1 | 2 | COM_RXD_1 |
| COM_TXD_1 | 3 | 4 | COM_DTR#_1 |
| GND | 5 | 6 | COM_DSR#_1 |
| COM_RTS#_1 | 7 | 8 | COM_CTS#_1 |
| COM_R#_1_R | 9 | 10 | NC |

2.4.8 Serial port 2 connector (COM2)

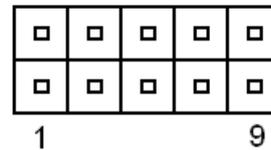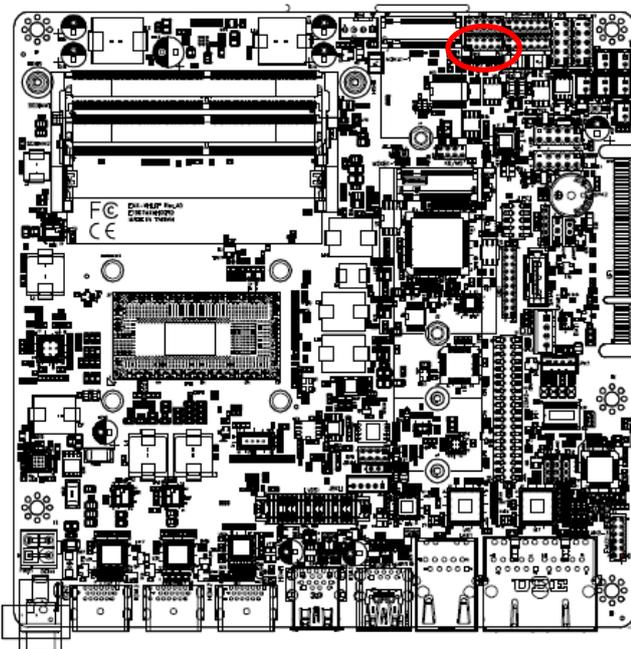



| Signal | PIN | PIN | Signal |
|------------|-----|-----|------------|
| COM_DCD#_2 | 1 | 2 | COM_RXD_2 |
| COM_TXD_2 | 3 | 4 | COM_DTR#_2 |
| GND | 5 | 6 | COM_DSR#_2 |
| COM_RTS#_2 | 7 | 8 | COM_CTS#_2 |
| COM_R#_2_R | 9 | 10 | NC |

2.4.9 General purpose I/O connector (DIO1)

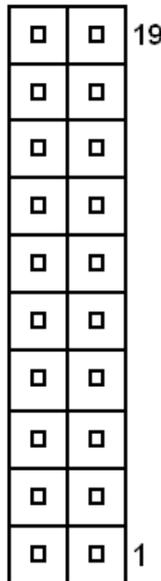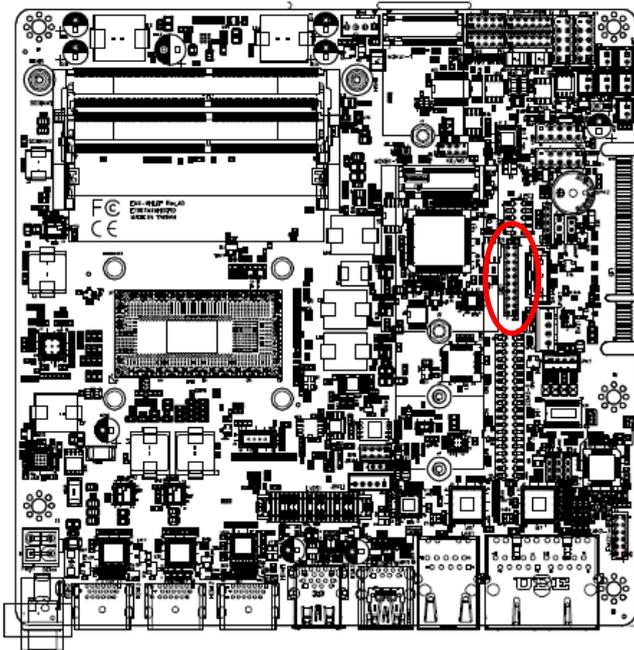



| Signal | PIN | PIN | Signal |
|-----------|-----|-----|------------|
| DI0 | 1 | 2 | DO0 |
| DI1 | 3 | 4 | DO1 |
| DI2 | 5 | 6 | DO2 |
| DI3 | 7 | 8 | DO3 |
| DI4 | 9 | 10 | DO4 |
| DI5 | 11 | 12 | DO5 |
| DI6 | 13 | 14 | DO6 |
| DI7 | 15 | 16 | DO7 |
| SMB_CLK_S | 17 | 18 | SMB_DATA_S |
| GND | 19 | 20 | +5V |

2.4.10 SPI connector (JSPI1)

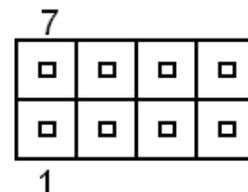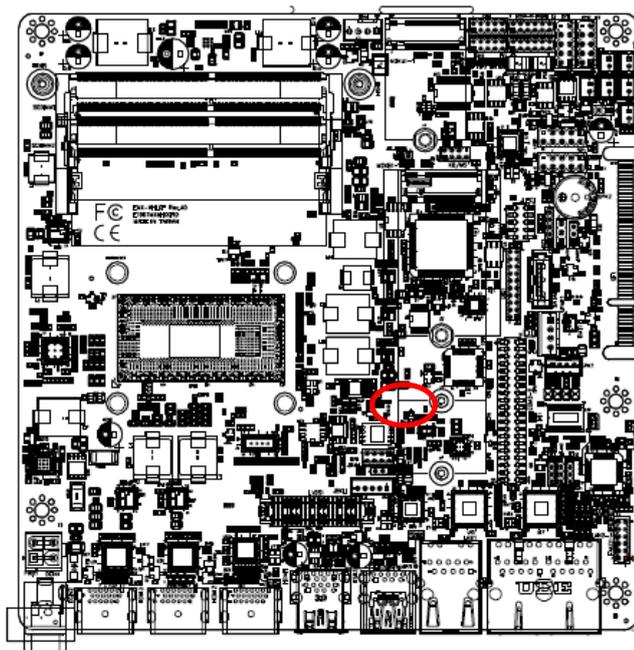


| Signal | PIN | PIN | Signal |
|-----------|-----|-----|---------|
| +3.3A_SPI | 1 | 2 | GND |
| SPI0_CS0# | 3 | 4 | SPI_CLK |
| SPI_SO | 5 | 6 | SPI_SI |
| HOLD# | 7 | 8 | SPI_WP# |

2.4.11 Serial port 3-6 connector (COM3-6)

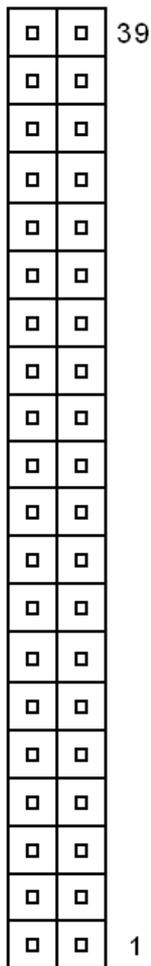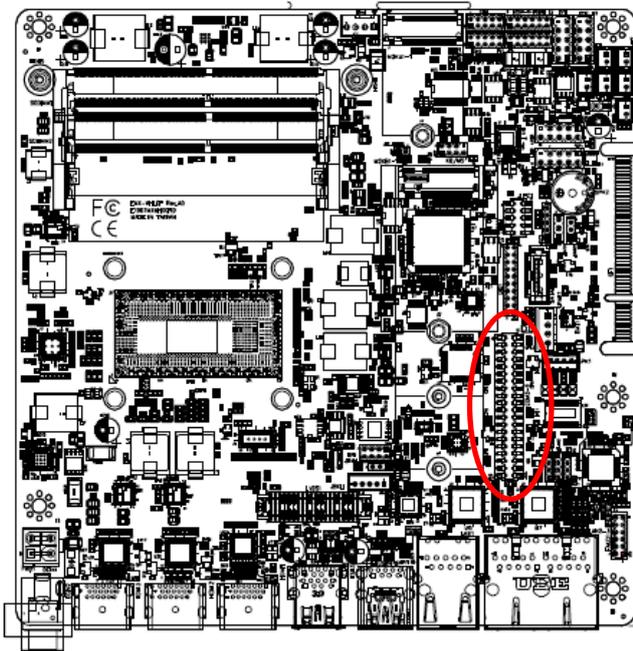



| Signal | PIN | PIN | Signal |
|------------|-----|-----|------------|
| NC | 40 | 39 | COM_R#_6 |
| COM_CTS#_6 | 38 | 37 | COM_RTS#_6 |
| COM_DSR#_6 | 36 | 35 | GND |
| COM_DTR#_6 | 34 | 33 | COM_TXD_6 |
| COM_RXD_6 | 32 | 31 | COM_DCD#_6 |
| NC | 30 | 29 | COM_R#_5 |
| COM_CTS#_5 | 28 | 27 | COM_RTS#_5 |
| COM_DSR#_5 | 26 | 25 | GND |
| COM_DTR#_5 | 24 | 23 | COM_TXD_5 |
| COM_RXD_5 | 22 | 21 | COM_DCD#_5 |
| NC | 20 | 19 | COM_R#_4 |
| COM_CTS#_4 | 18 | 17 | COM_RTS#_4 |
| COM_DSR#_4 | 16 | 15 | GND |
| COM_DTR#_4 | 14 | 13 | COM_TXD_4 |
| COM_RXD_4 | 12 | 11 | COM_DCD#_4 |
| NC | 10 | 9 | COM_R#_3 |
| COM_CTS#_3 | 8 | 7 | COM_RTS#_3 |
| COM_DSR#_3 | 6 | 5 | GND |
| COM_DTR#_3 | 4 | 3 | COM_TXD_3 |
| COM_RXD_3 | 2 | 1 | COM_DCD#_3 |

2.4.12 SATA Power connector (SPWR1)

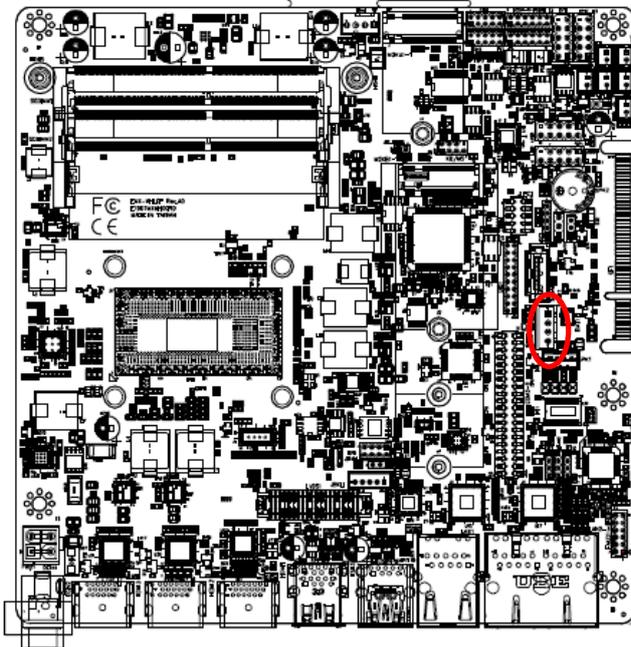



| PIN | Signal |
|-----|-------------|
| 1 | +V5S_SATA1 |
| 2 | GND |
| 3 | GND |
| 4 | +V12S_SATA1 |

2.4.13 CPU Fan connector (JFAN1)

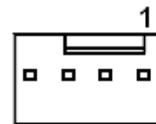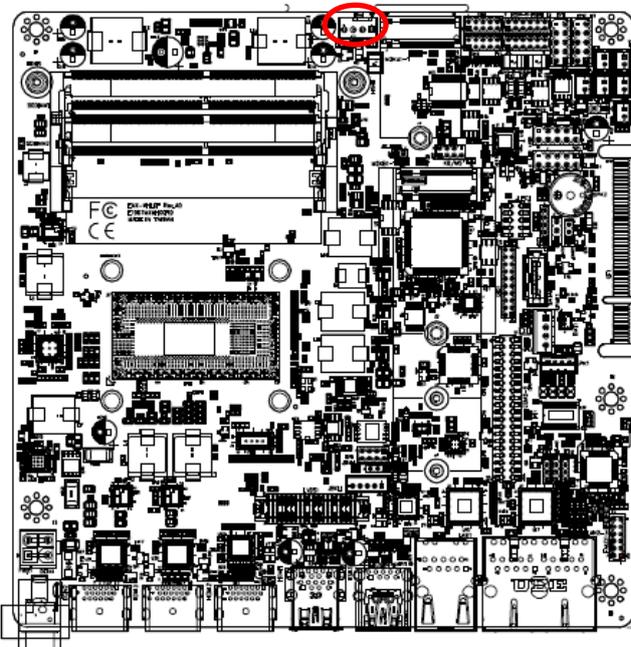



| PIN | Signal |
|-----|-----------|
| 1 | GND |
| 2 | +12V_FAN1 |
| 3 | CPUFANIN |
| 4 | FAN_PWM0 |

2.4.14 USB connector 1(USB1)

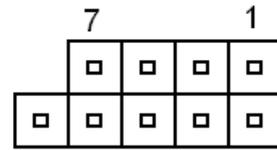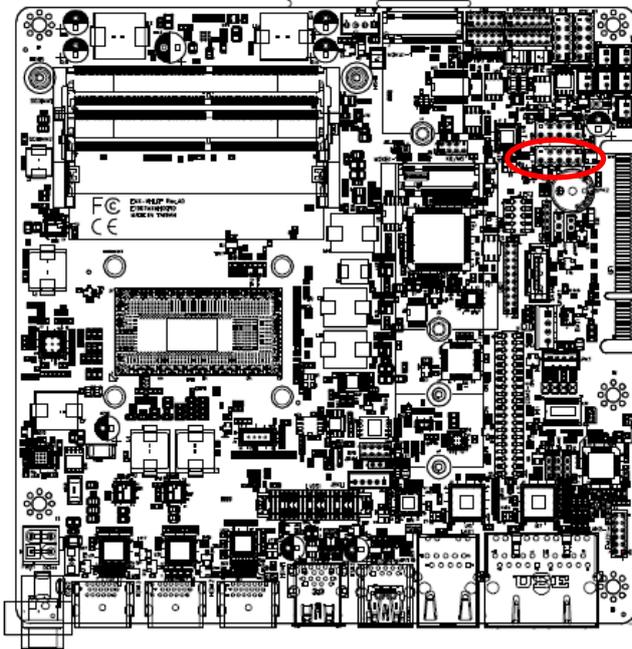


| Signal | PIN | PIN | Signal |
|-------------|-----|-----|-------------|
| +V5A_HUB1-4 | 1 | 2 | +V5A_HUB1-4 |
| UHUB_DM1_R | 3 | 4 | UHUB_DM2_R |
| UHUB_DP1_R | 5 | 6 | UHUB_DP2_R |
| GND | 7 | 8 | GND |
| | | 10 | NC |

2.4.15 USB connector 2(USB2)

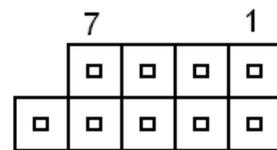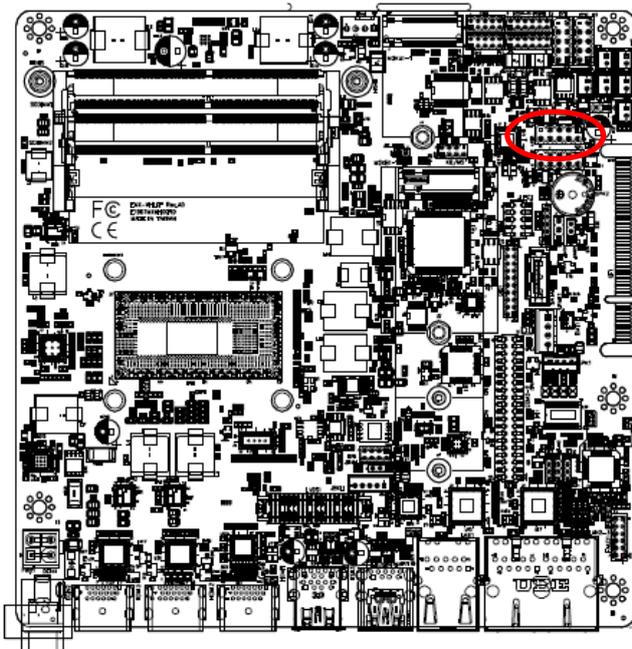



| Signal | PIN | PIN | Signal |
|-------------|-----|-----|-------------|
| +V5A_HUB1-4 | 1 | 2 | +V5A_HUB1-4 |
| UHUB_DM3_R | 3 | 4 | UHUB_DM4_R |
| UHUB_DP3_R | 5 | 6 | UHUB_DP4_R |
| GND | 7 | 8 | GND |
| | | 10 | NC |

2.4.16 LVDS connector (LVDS1)

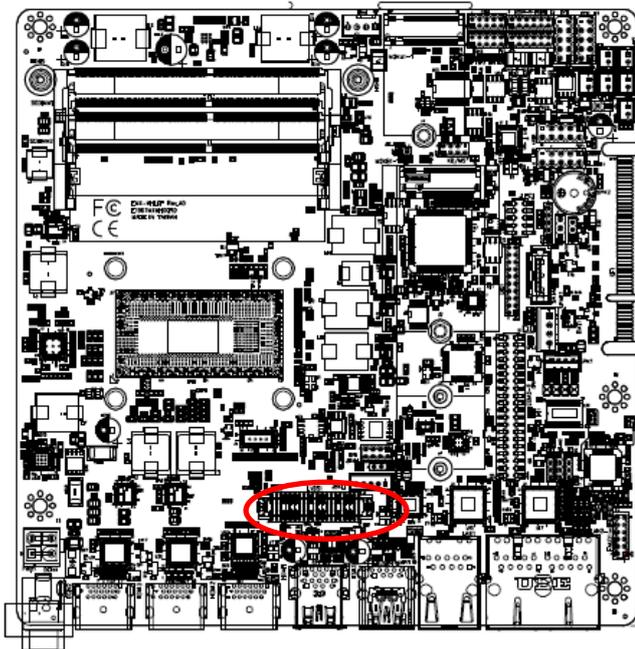



| Signal | PIN | PIN | Signal |
|--------------|-----|-----|--------------|
| +5V_LVDS | 2 | 1 | +3.3V_LVDS |
| +5V_LVDS | 4 | 3 | +3.3V_LVDS |
| NC | 6 | 5 | NC |
| GND | 8 | 7 | GND |
| LVDS_DATA0_P | 10 | 9 | LVDS_DATA1_P |
| LVDS_DATA0_N | 12 | 11 | LVDS_DATA1_N |
| GND | 14 | 13 | GND |
| LVDS_DATA2_P | 16 | 15 | LVDS_DATA3_P |
| LVDS_DATA2_N | 18 | 17 | LVDS_DATA3_N |
| GND | 20 | 19 | GND |
| LVDS_DATA4_P | 22 | 21 | LVDS_DATA5_P |
| LVDS_DATA4_N | 24 | 23 | LVDS_DATA5_N |
| GND | 26 | 25 | GND |
| LVDS_DATA6_P | 28 | 27 | LVDS_DATA7_P |
| LVDS_DATA6_N | 30 | 29 | LVDS_DATA7_N |
| GND | 32 | 31 | GND |
| LVDS_CLK1_P | 34 | 33 | LVDS_CLK2_P |
| LVDS_CLK1_N | 36 | 35 | LVDS_CLK2_N |
| GND | 38 | 37 | GND |
| +12V | 40 | 39 | +12V |

2.4.17 Front Audio connector (FAUD1)

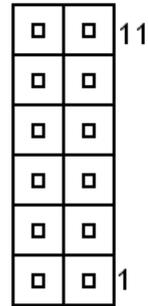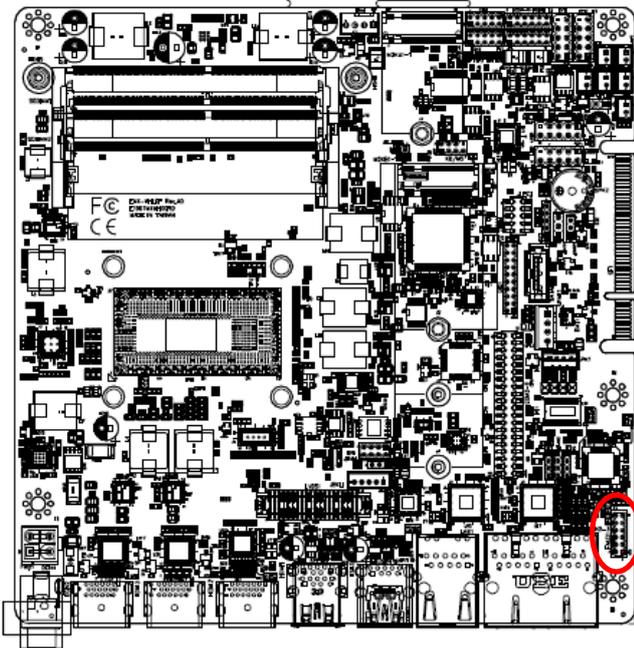



| Signal | PIN | PIN | Signal |
|-----------|-----|-----|-------------|
| GND_AUD | 12 | 11 | MIC1_JD |
| NC | 10 | 9 | LINEOUT1_JD |
| MIC1_LIN | 8 | 7 | MIC1_RIN |
| NC | 6 | 5 | NC |
| GND_AUD | 4 | 3 | GND_AUD |
| LINEOUT_L | 2 | 1 | LINEOUT_R |

2.4.18 EC Debug (JEC_DEBUG)

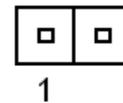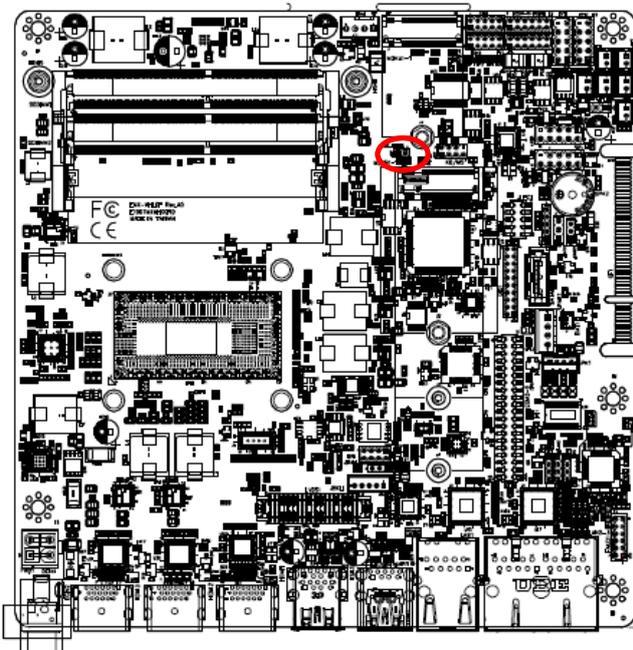



| PIN | Signal |
|-----|----------|
| 1 | EC_SMCLK |
| 2 | EC_SMDAT |

2.4.19 Battery connector (BAT1)

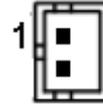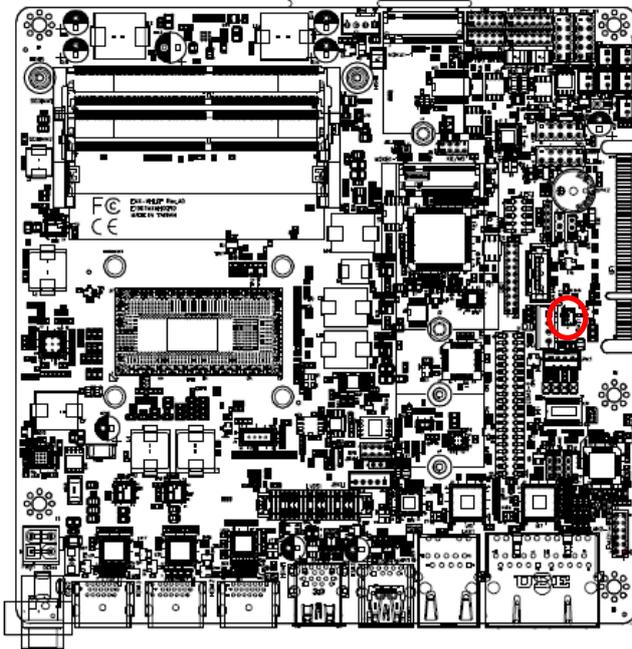



| PIN | Signal |
|-----|----------|
| 1 | +VRTCBAT |
| 2 | GND |

2.4.20 PS/2 keyboard & mouse header (KB/MS)

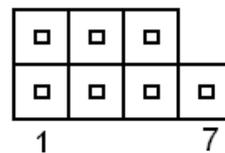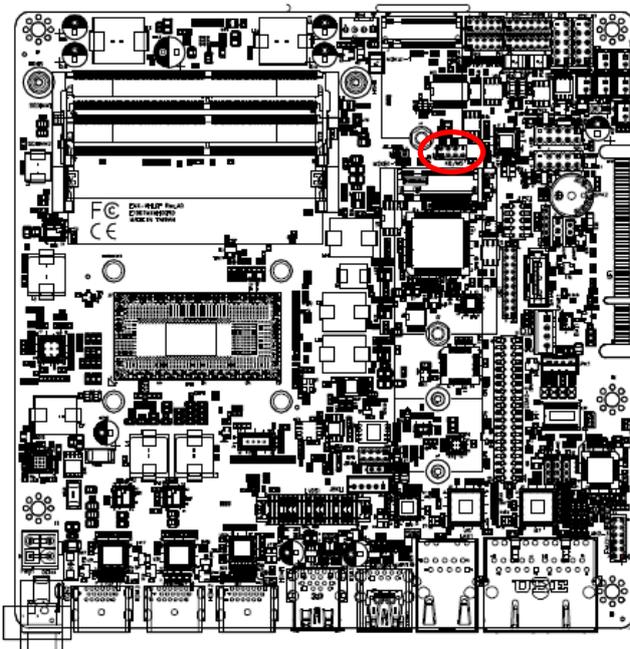



| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| KBDAT | 1 | 2 | KBCLK |
| GND | 3 | 4 | 5V |
| MSDAT | 5 | 6 | MSCLK |
| NC | 7 | | |

2.4.21 Miscellaneous setting connector 1 (FPT1)

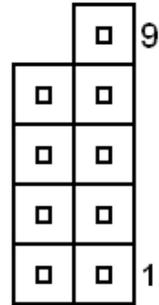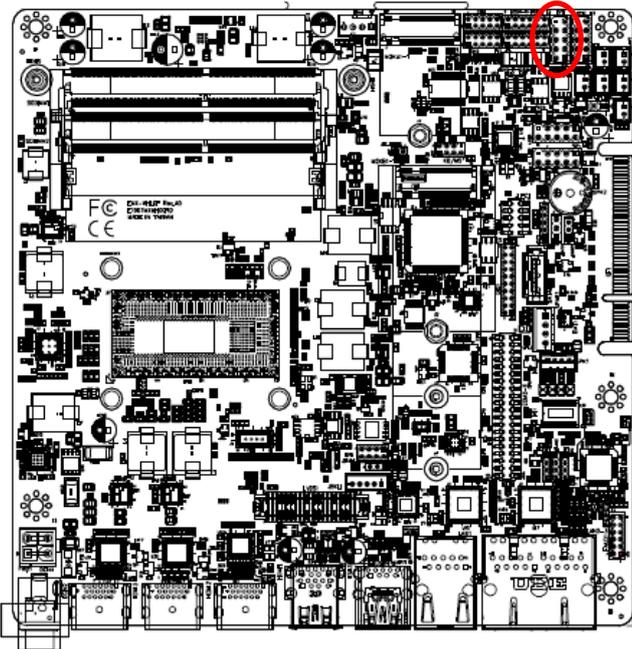



| Signal | PIN | PIN | Signal |
|----------|-----|-----|---------|
| | | 9 | NC |
| -PWR_BTN | 8 | 7 | -Reset |
| +PWR_BTN | 6 | 5 | +Reset |
| -PWR_LED | 4 | 3 | -HD_LED |
| +PWR_LED | 2 | 1 | +HD_LED |

2.4.22 Miscellaneous setting connector 2 (FPT2)

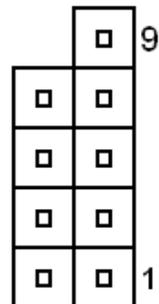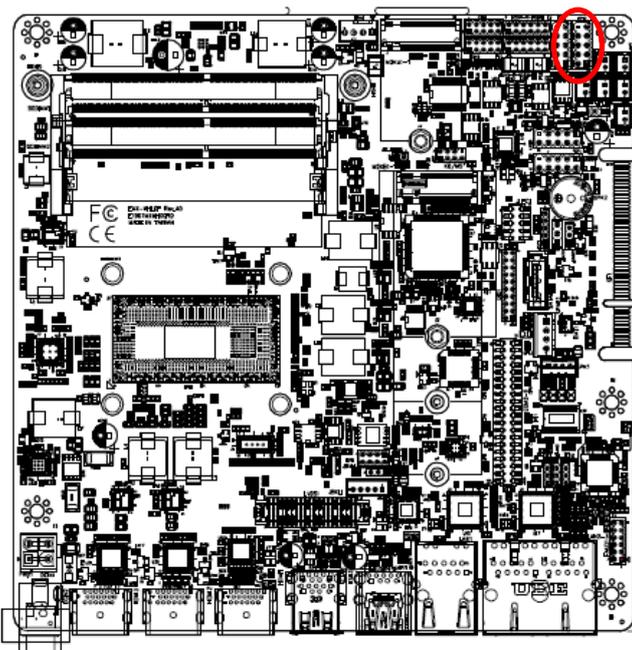



| Signal | PIN | PIN | Signal |
|----------|-----|-----|-------------|
| Speaker+ | 1 | 2 | BLK_VR(10K) |
| NC | 3 | 4 | BLK_UP |
| NC | 5 | 6 | BLK_DN |
| Speaker- | 7 | 8 | GND |
| NC | 9 | 10 | |

2.4.23 LED indicator connector 1 (LED1)

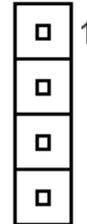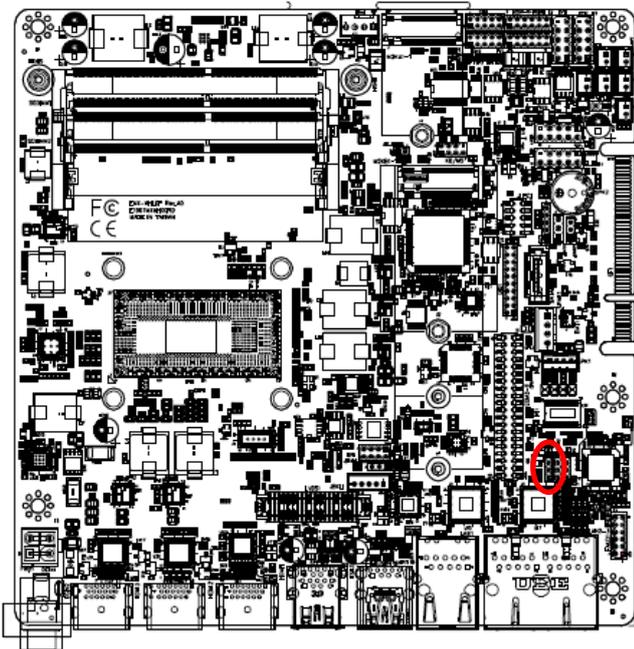



| PIN | Signal |
|-----|----------------|
| 1 | LAN1_ACT_P |
| 2 | LAN1_ACT_N |
| 3 | LAN1_100#_LED |
| 4 | LAN1_1000#_LED |

2.4.24 LED indicator connector 2 (LED2)

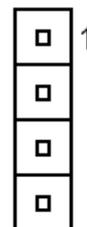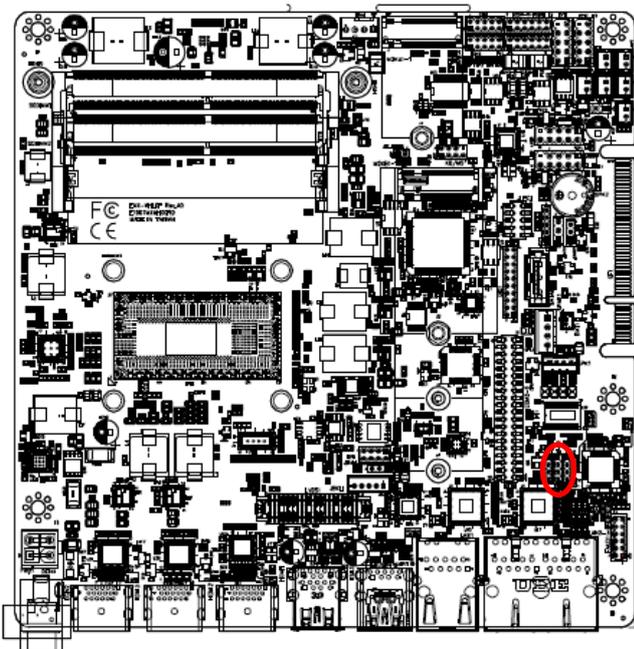



| PIN | Signal |
|-----|----------------|
| 1 | LAN2_ACT_P |
| 2 | LAN2_ACT_N |
| 3 | LAN2_100#_LED |
| 4 | LAN2_1000#_LED |

2.4.25 LED indicator connector 3 (LED3)

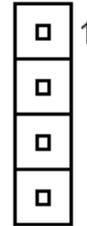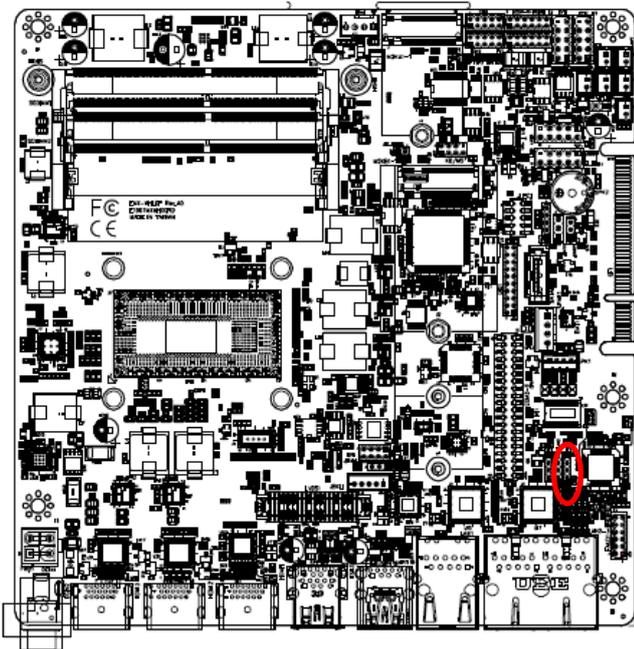



| PIN | Signal |
|-----|----------------|
| 1 | LAN3_ACT_P |
| 2 | LAN3_ACT_N |
| 3 | LAN3_100#_LED |
| 4 | LAN3_1000#_LED |

2.4.26 Speaker connector (SPK1)

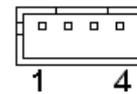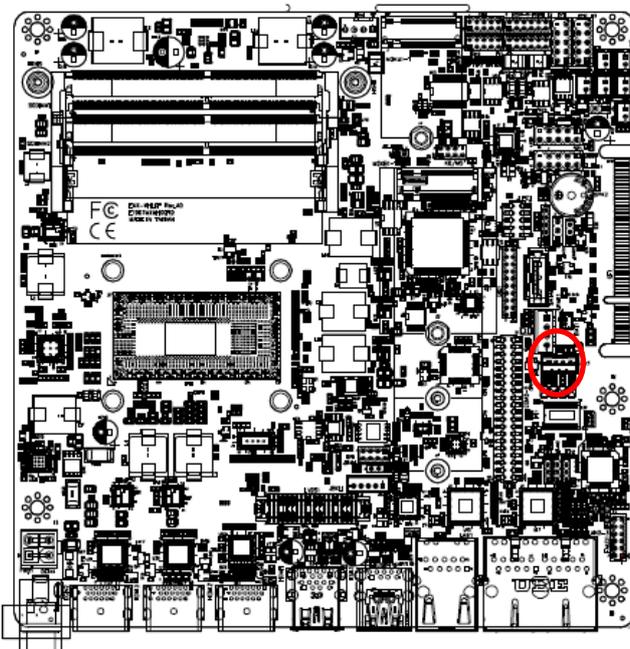



| PIN | Signal |
|-----|--------|
| 1 | SPK_L+ |
| 2 | SPK_L- |
| 3 | SPK_R+ |
| 4 | SPK_R- |

2.4.27 JI2C connector (JI2C1)

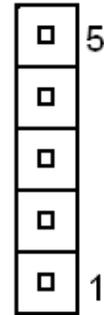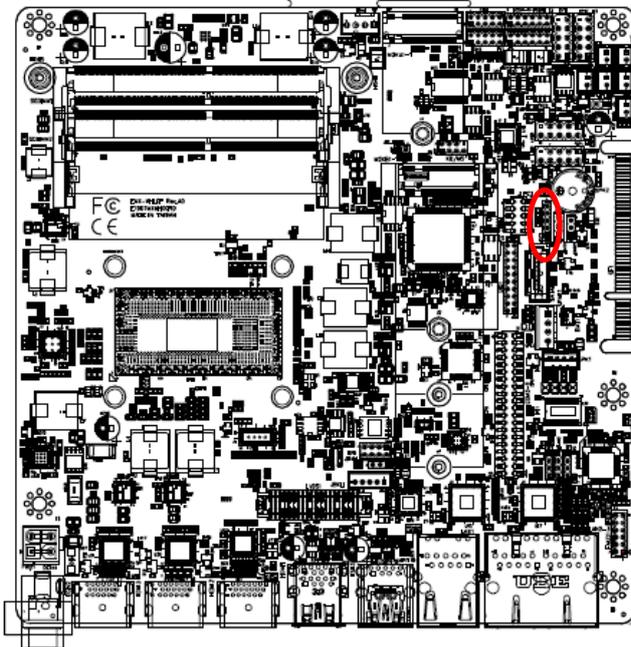


| PIN | Signal |
|-----|-----------|
| 1 | +3.3V |
| 2 | INT_I2C0# |
| 3 | I2C0_CLK |
| 4 | I2C0_DATA |
| 5 | GND |

2.4.28 LPC connector (JLPC1)

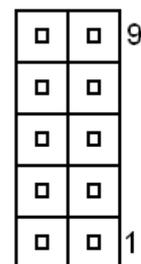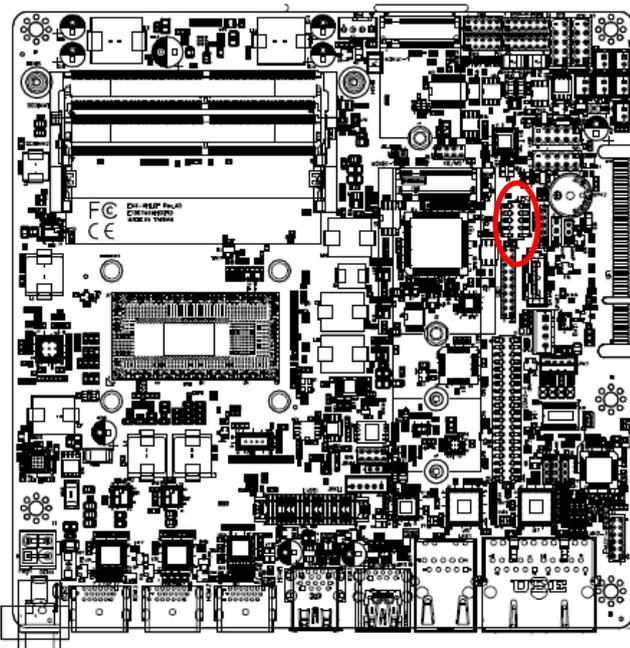



| Signal | PIN | PIN | Signal |
|-------------|-----|-----|------------|
| GND | 10 | 9 | LPC_SERIRQ |
| LPC_CLK | 8 | 7 | LPC_AD3 |
| LPC_FRAME# | 6 | 5 | LPC_AD2 |
| PCH_PLTRST# | 4 | 3 | LPC_AD1 |
| +3.3V | 2 | 1 | LPC_AD0 |

2.4.29 CPU Heatsink Heater Connector (JHT1/2/3/4/5/6)

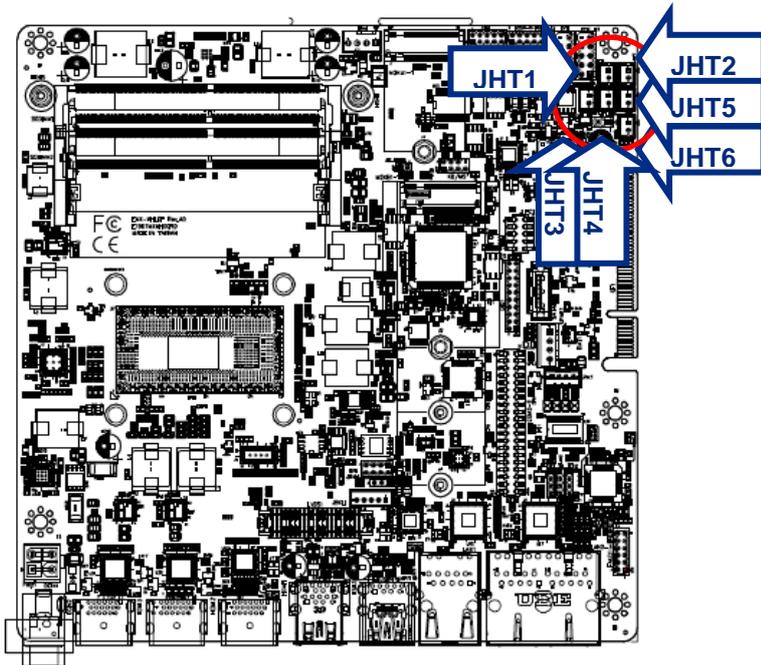




| PIN | Signal |
|-----|--------|
| 1 | +12V |
| 2 | GND |

2.4.30 LED Indicator for Heater (JHT_LED1)

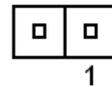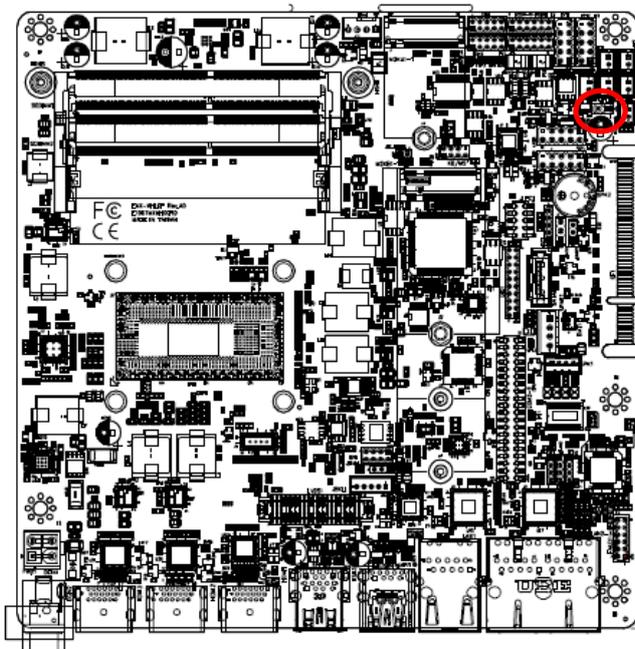



| PIN | Signal |
|-----|--------|
| 1 | +12V |
| 2 | GND |

2.4.31 Gold Finger (GF)

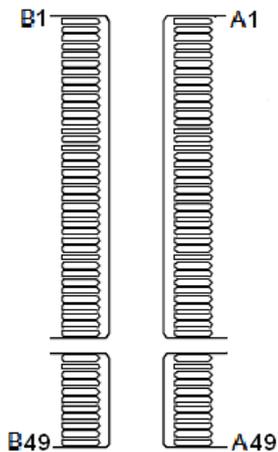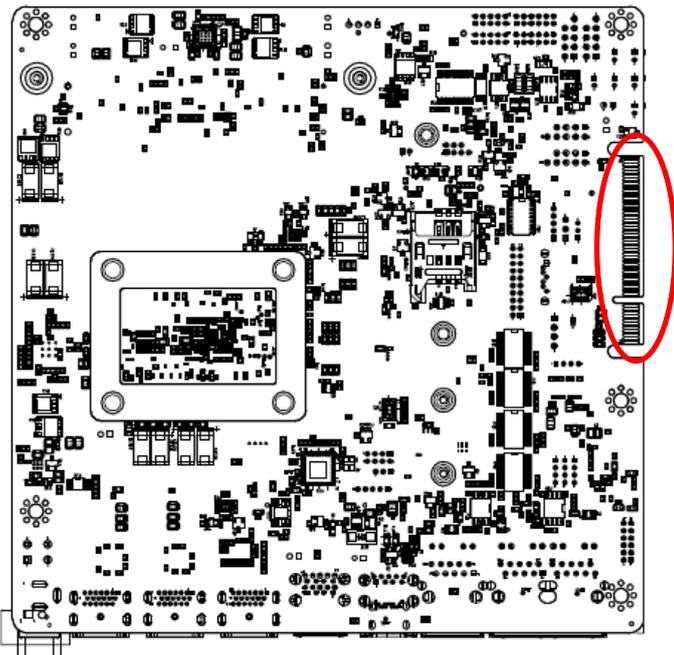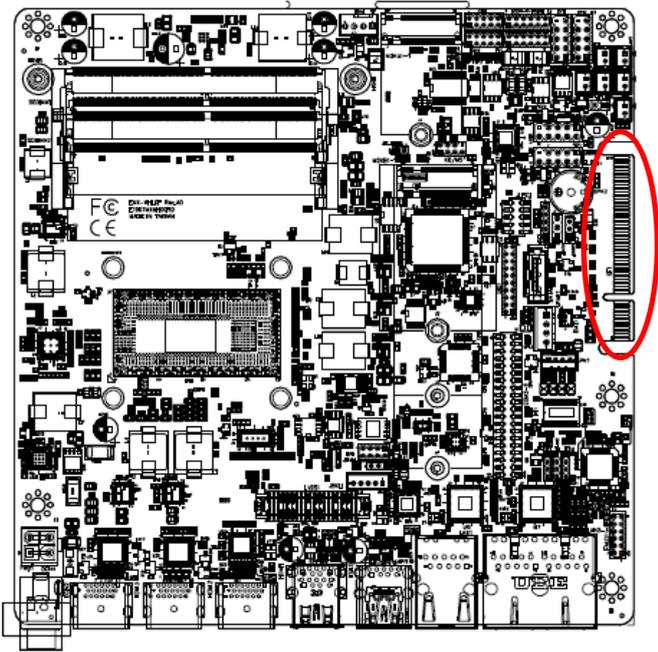


| Signal | PIN | PIN | Signal |
|----------------|-----|-----|-----------------|
| +12V | B1 | A1 | +12V |
| +12V | B2 | A2 | +12V |
| +12V | B3 | A3 | +12V |
| GND | B4 | A4 | GND |
| SMB_CLK_S | B5 | A5 | EN_V5S-V3.3S |
| SMB_DATA_S | B6 | A6 | GF_PWR_OK |
| GND | B7 | A7 | GF_CKL_REQ# |
| NC | B8 | A8 | GF_SATA1_DEVSLP |
| GF_PWR_BTN_EC# | B9 | A9 | +5V |
| +3.3V | B10 | A10 | +5V |
| GF_PWAKE# | B11 | A11 | RST_GF# |
| | KEY | | |
| USB_PWR_EN_GF | B12 | A12 | GND |
| GND | B13 | A13 | CLK_GF_P5 |
| PCIE_TXP13 | B14 | A14 | CLK_GF_N5 |
| PCIE_TXN13 | B15 | A15 | GND |
| GND | B16 | A16 | PCIE_RXP13 |
| NC | B17 | A17 | PCIE_RXN13 |
| GND | B18 | A18 | GND |
| PCIE_TXP14 | B19 | A19 | NC |
| PCIE_TXN14 | B20 | A20 | GND |
| GND | B21 | A21 | PCIE_RXP14 |
| GND | B22 | A22 | PCIE_RXN14 |
| PCIE_TXP15 | B23 | A23 | GND |
| PCIE_TXN15 | B24 | A24 | GND |
| GND | B25 | A25 | PCIE_RXP15 |



SLP-WHG-TSN

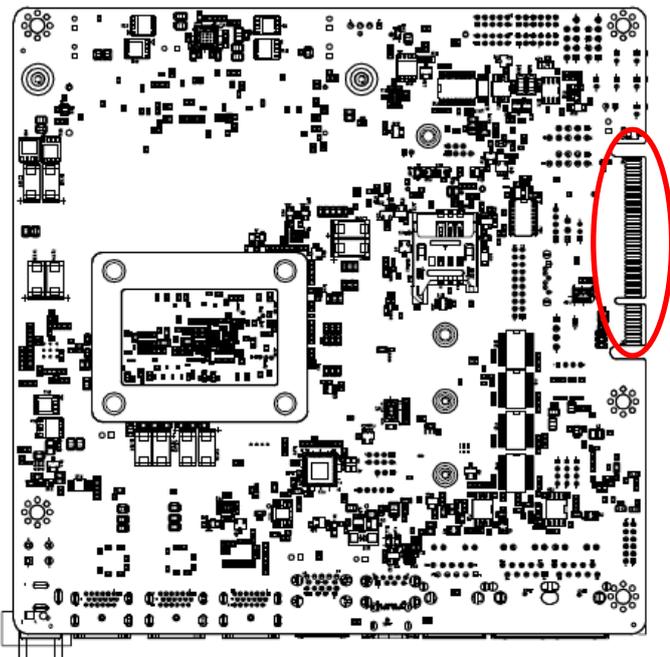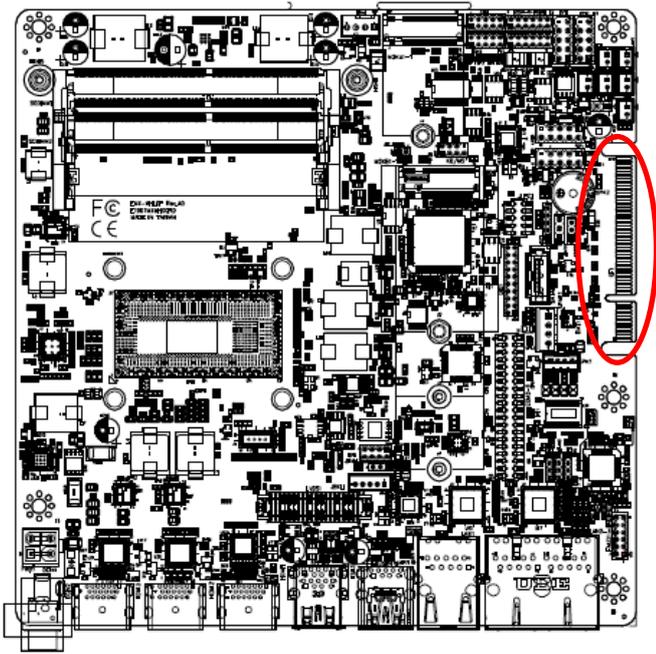

| Signal | PIN | PIN | Signal |
|-----------------|-----|-----|-----------------|
| GND | B26 | A26 | PCIE_RXN15 |
| PCIE_TXP16 | B27 | A27 | GND |
| PCIE_TXN16 | B28 | A28 | GND |
| GND | B29 | A29 | PCIE_RXP16 |
| NC | B30 | A30 | PCIE_RXN16 |
| NC | B31 | A31 | GND |
| GND | B32 | A32 | NC |
| USB_PP7 | B33 | A33 | GF_USB_OC# |
| USB_PN7 | B34 | A34 | GND |
| GND | B35 | A35 | NC |
| GND | B36 | A36 | NC |
| SATA_TXP_1_GF_L | B37 | A37 | GND |
| SATA_TXN_1_GF_L | B38 | A38 | GND |
| GND | B39 | A39 | SATA_RXN_1_GF_L |
| GND | B40 | A40 | SATA_RXP_1_GF_L |
| PCIE_GF_TXP9 | B41 | A41 | GND |
| PCIE_GF_TXN9 | B42 | A42 | GND |
| GND | B43 | A43 | PCIE_GF_RXP9 |
| GND | B44 | A44 | PCIE_GF_RXN9 |
| NC | B45 | A45 | GND |
| NC | B46 | A46 | GND |
| GND | B47 | A47 | NC |
| NC | B48 | A48 | NC |
| GND | B49 | A49 | GND |

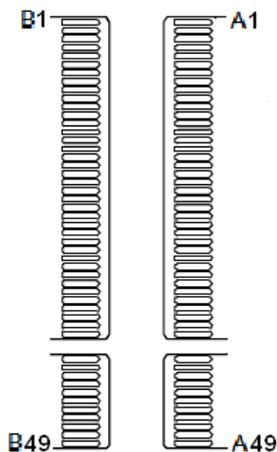

2.4.32 Power connector (PWR1)

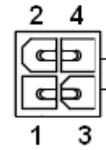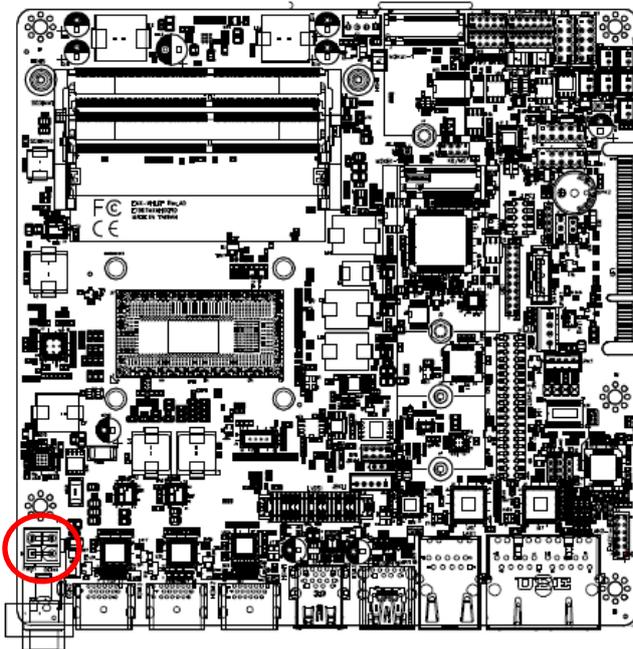

| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| GND | 2 | 4 | +VIN |
| GND | 1 | 3 | +VIN |

Note: VIN = 12~24V

3. BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing or <F2> immediately after switching the system on, or

By pressing the or <F2> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

| Button | Description |
|--------|----------------------------|
| ↑↓→← | Move |
| Enter | Select |
| +/- | Value |
| Esc | Exit |
| F1 | General Help |
| F2 | Previous Values |
| F3 | Optimized Defaults |
| F4 | Save & Exit Setup |
| <K> | Scroll help area upwards |
| <M> | Scroll help area downwards |

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “>” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or <Enter> key.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

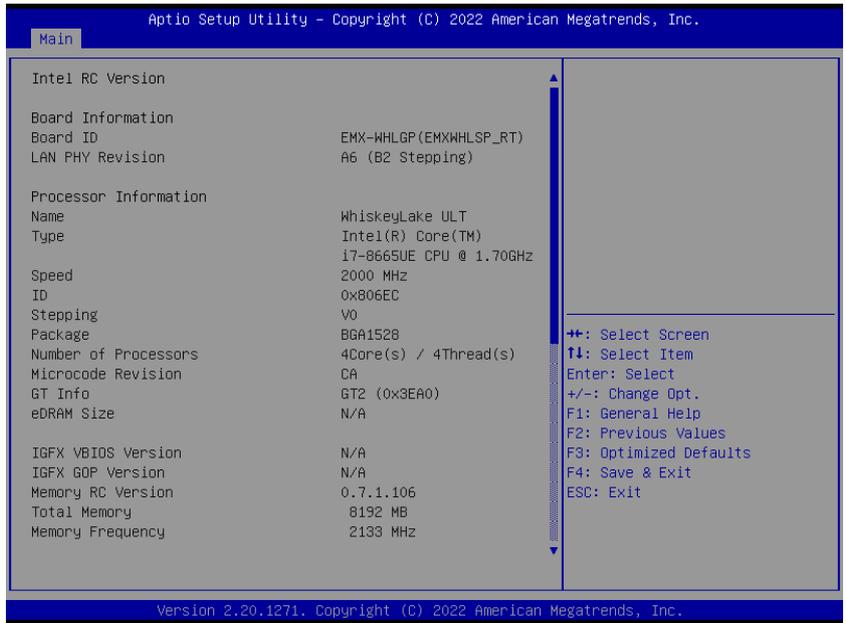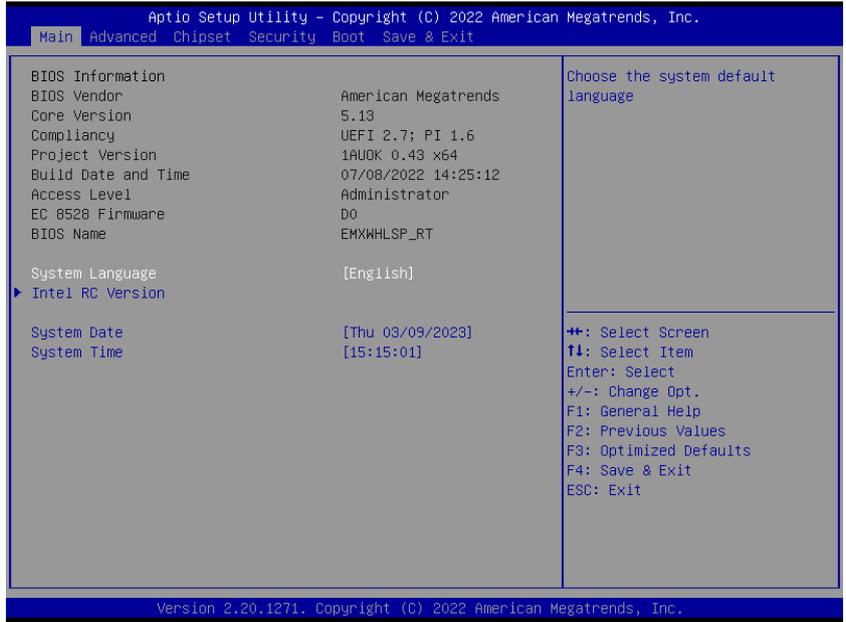

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the month/day/year.

3.6.1.3 System Time


Use the system time option to set the system time. Manually enter the hours, minutes and seconds.



Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen. Visit the Avalue website (www.avalu.com.tw) to download the latest product and BIOS information.

3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

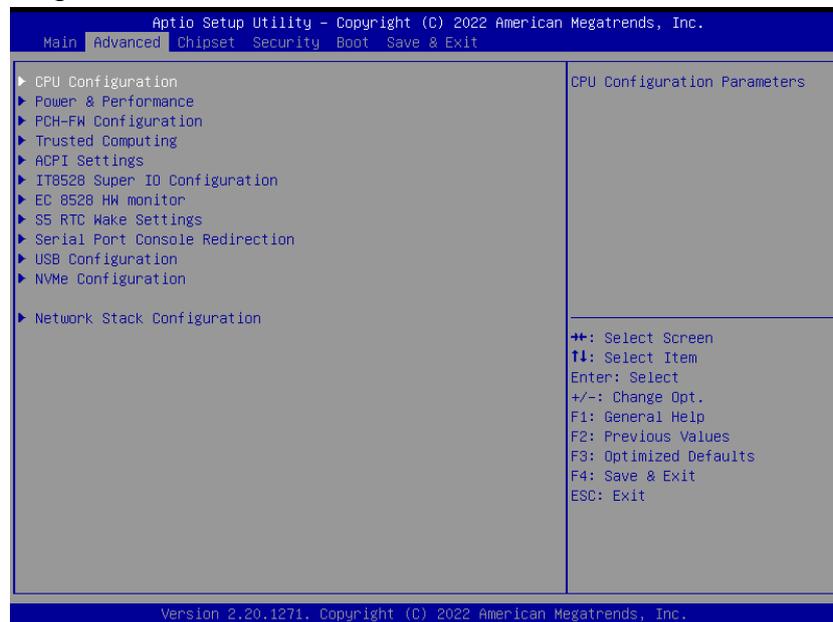


3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.




| Item | Options | Description |
|--|-------------------------------|---|
| Intel (VMX) Virtualization Technology | Disabled, Enabled[Default] | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. |
| Active Processor Cores | All[Default] 1/2/3/4 | Number of cores to enable in each processor package. |

3.6.2.2 Power & Performance

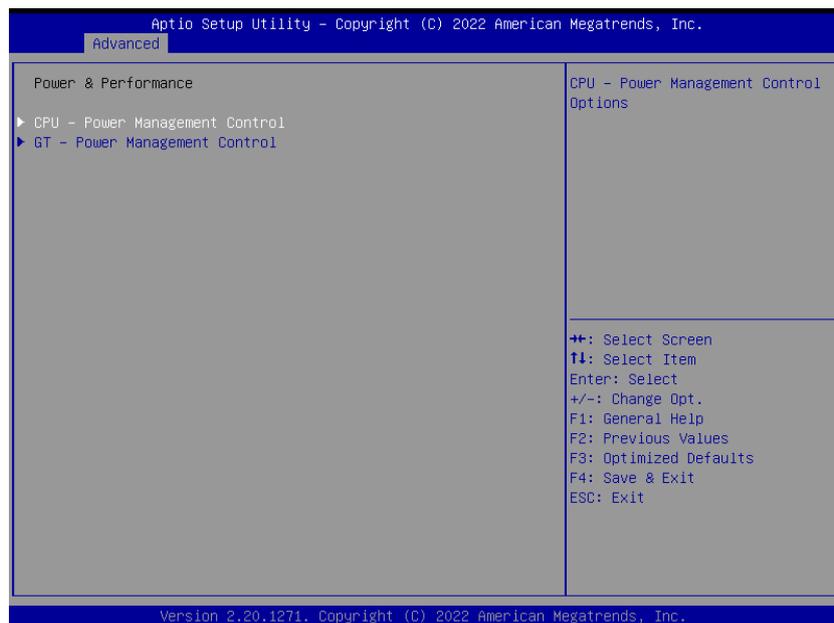


3.6.2.2.1 CPU - Power Management Control

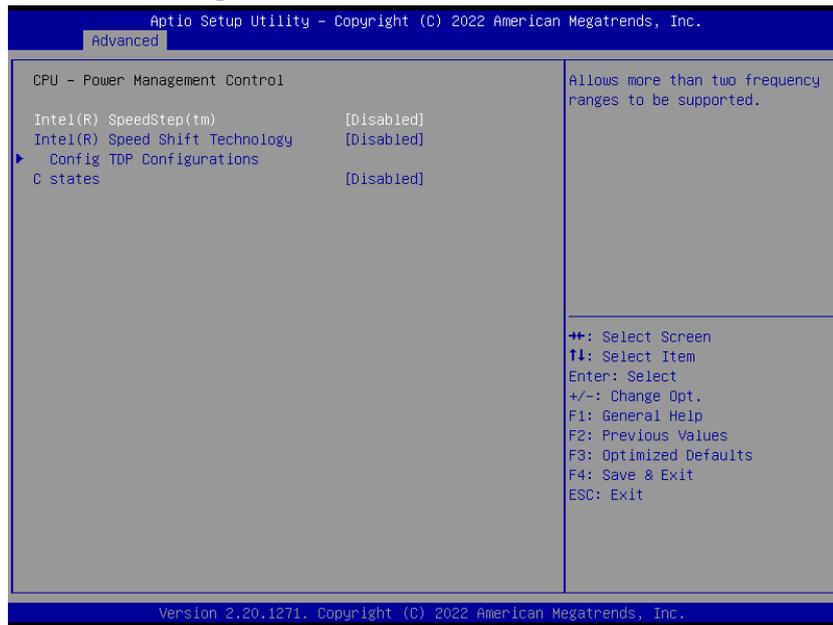

| Item | Options | Description |
|---------------------------------|-------------------------------|---|
| Intel(R) SpeedStep(tm) | Disabled[Default], Enabled | Allows more than two frequency ranges to be supported. |
| Intel(R) Speed Shift Technology | Disabled[Default], Enabled | Enable/Disable Intel(R) Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states. |
| C states | Disabled[Default], Enabled | Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized. |


3.6.2.2.1.1 Config TDP Configurations

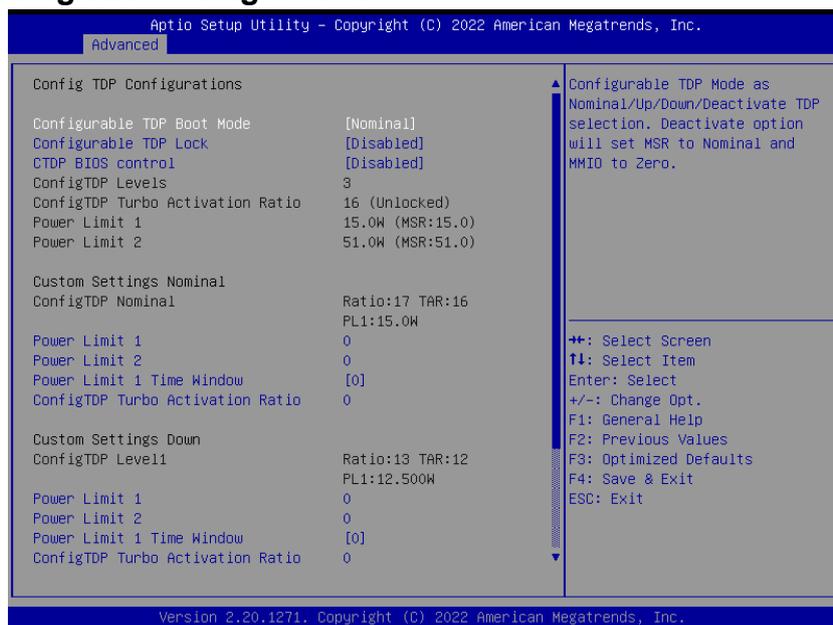

SLP-WHG-TSN


| Item | Options | Description |
|---|---|---|
| Configurable TDP Boot Mode | Nominal[Default] Up Down Deactivate | Configurable TDP Mode as Nominal/Up/Down/Deactivate TDP selection. Deactivate option will set MSR to Nominal and MMIO to Zero. |
| Configurable TDP Lock | Enabled, Disabled[Default] | Configurable TDP Mode Lock sets the Lock bits on TURBO_ACTIVATION_RATIO and CONFIG_TDP_CONTROL. Note: When CTD Lock is enabled Custom ConfigTDP Count will be forced to 1 and Custom ConfigTDP Boot Index will be forced to 0. |
| CTDP BIOS control | Enabled, Disabled[Default] | Enables CTD control via runtime ACPI BIOS methods. This "BIOS only" feature does not require EC or driver support. |
| Power Limit 1 | 0 | Power Limit 1 in values from MMIO |
| Power Limit 2 | 0 | Power Limit 1 in values from MMIO |
| Power Limit 1 Time Window | 0[Default] 1/2/3/4/5/6/7/8/10/ 12/14/16/20/24/28/ 32/40/48/56/64/80/ 96/112/128 | Power Limit 1 Time Window value in seconds. The value may vary from 0 to 128. 0 = use default value (28 sec). Defines time window which TDP value should be maintained. |
| ConfigTDP Turbo Activation Ratio | 0 | Custom value for Turbo Activation Ratio. Needs to be configured with valid values from LFM to Max Turbo. 0 means don't use custom value. |

3.6.2.2.2 GT - Power Management Control

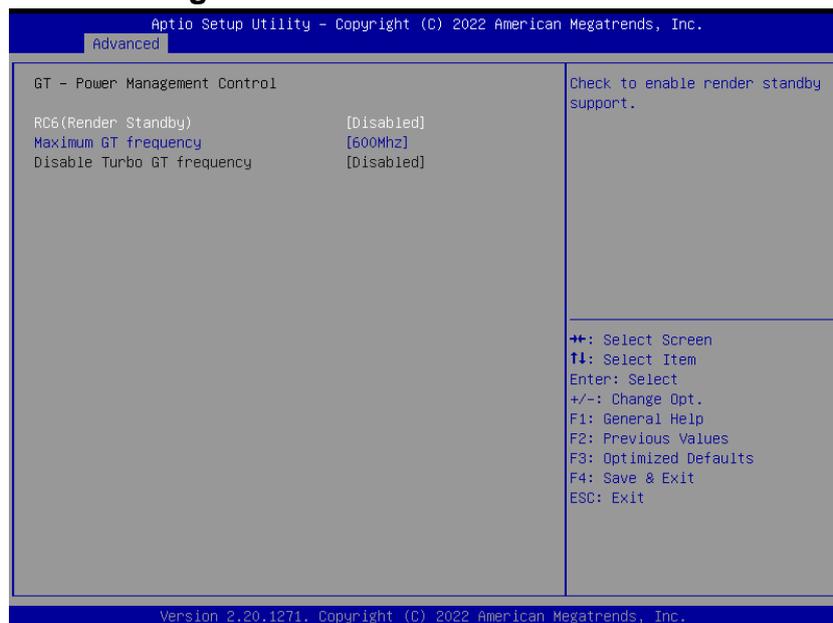

| Item | Options | Description |
|-----------------------------------|---|---|
| RC6(Render Standby) | Disabled[Default], Enabled | Check to enable render standby support. |
| Maximum GT frequency | Default Max Frequency[Default] 100Mhz/150Mhz/200Mhz/ 250Mhz/300Mhz/350Mhz/ 400Mhz/450Mhz/500Mhz/ 550Mhz/600Mhz/650Mhz/ 700Mhz/750Mhz/800Mhz/ 850Mhz/900Mhz/950Mhz/ 1000Mhz/1050Mhz/1100Mhz/ 1150Mhz/1200Mhz | Auto Updated |
| Disable Turbo GT frequency | Enabled, Disabled[Default] | Enabled: Disables Turbo GT frequency. Disabled GT frequency is not limited |

3.6.2.3 PCH-FW Configuration

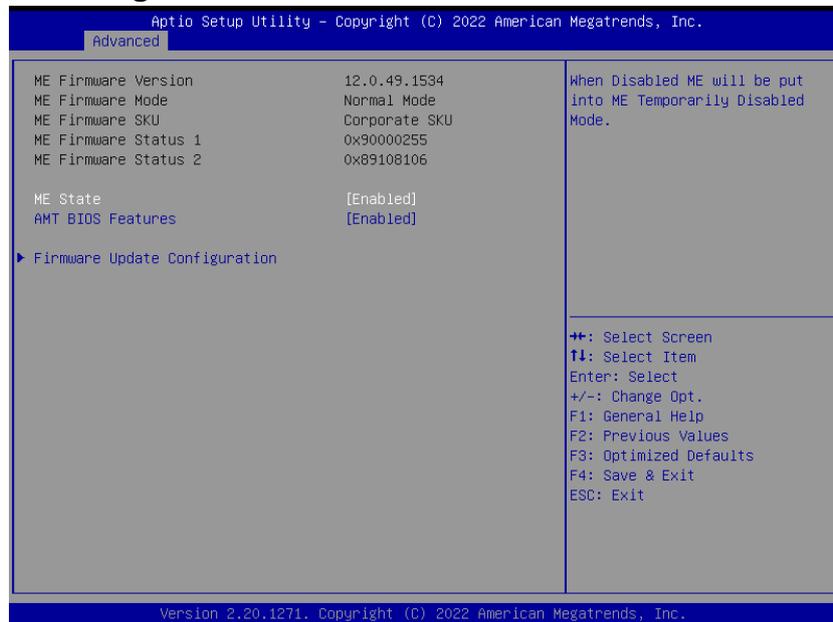


| Item | Options | Description |
|--------------------------|-------------------------------|---|
| ME State | Disabled, Enabled[Default] | When Disabled ME will be put into ME Temporarily Disabled Mode. |
| AMT BIOS Features | Disabled, Enabled[Default] | When disabled AMT BIOS Features are no longer supported and user is no longer able to access MEBx Setup. Note: This option does not disable Manageability Features in FW. |

3.6.2.3.1 Firmware Update Configuration




| Item | Options | Description |
|----------------------|-------------------------------|---|
| Me FW Image Re-Flash | Disabled[Default], Enabled | Enable/Disable Me FW Image Re-Flash function. |

3.6.2.4 Trusted Computing

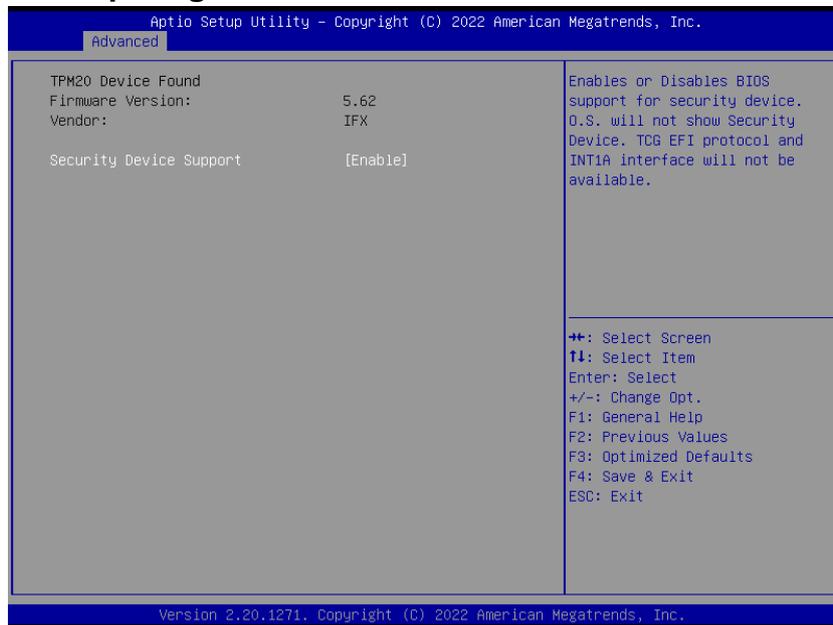


| Item | Options | Description |
|-------------------------|-----------------------------|---|
| Security Device Support | Disable, Enable[Default] | Enable or Disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available. |

3.6.2.5 ACPI Settings

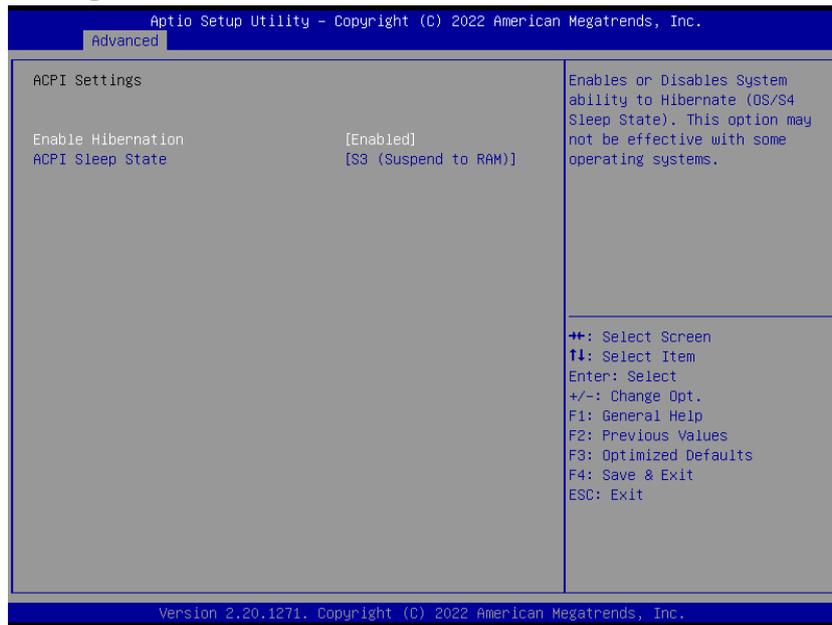

| Item | Options | Description |
|---------------------------|---|--|
| Enable Hibernation | Disabled Enabled[Default], | Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some operating systems. |
| ACPI Sleep State | Suspend Disabled, S3 (Suspend to RAM)[Default] | Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed. |


3.6.2.6 IT8528 Super IO Configuration

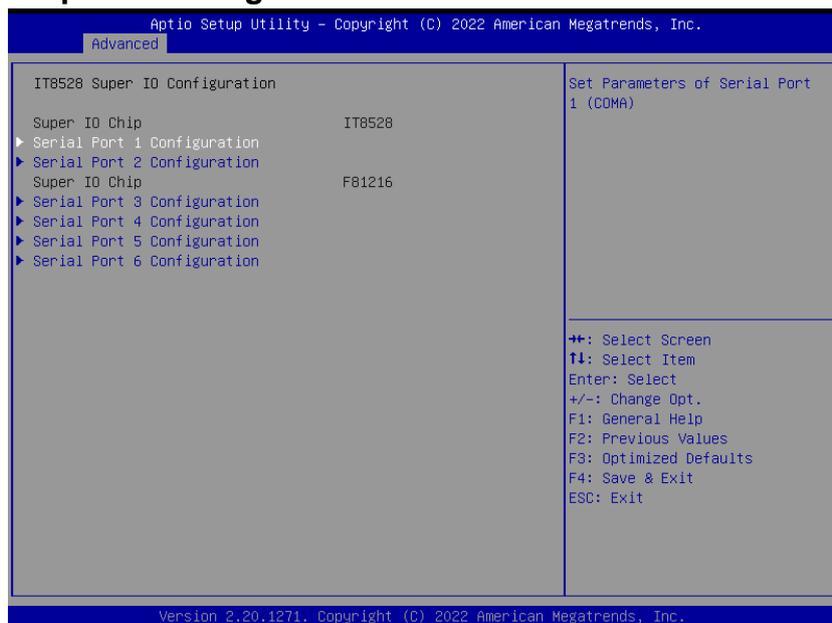

SLP-WHG-TSN


| Item | Description |
|------------------------------------|---|
| Serial Port 1 Configuration | Set Parameters of Serial Port 1 (COMA). |
| Serial Port 2 Configuration | Set Parameters of Serial Port 2 (COMB). |
| Serial Port 3 Configuration | Set Parameters of Serial Port 3 (COMC). |
| Serial Port 4 Configuration | Set Parameters of Serial Port 4 (COMD). |
| Serial Port 5 Configuration | Set Parameters of Serial Port 5 (COME). |
| Serial Port 6 Configuration | Set Parameters of Serial Port 6 (COMF). |

3.6.2.6.1 Serial Port 1 Configuration

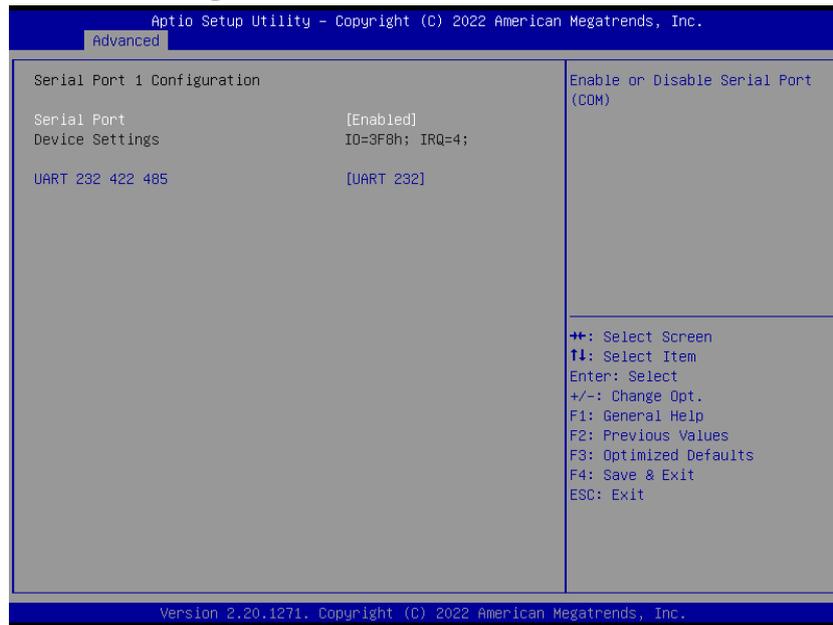


| Item | Option | Description |
|-------------------------|---|--|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |
| UART 232 422 485 | UART 232[Default], UART 422, UART 485 | Change the Serial Port as RS232/422/485. |

3.6.2.6.2 Serial Port 2 Configuration

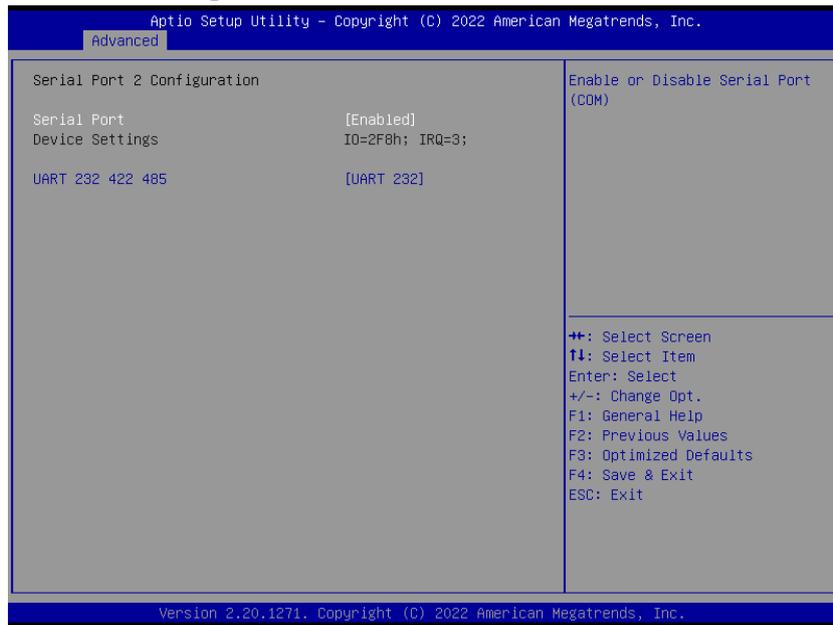


| Item | Option | Description |
|------------------|---|--|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |
| UART 232 422 485 | UART 232[Default], UART 422, UART 485 | Change the Serial Port as RS232/422/485. |

3.6.2.6.3 Serial Port 3 Configuration

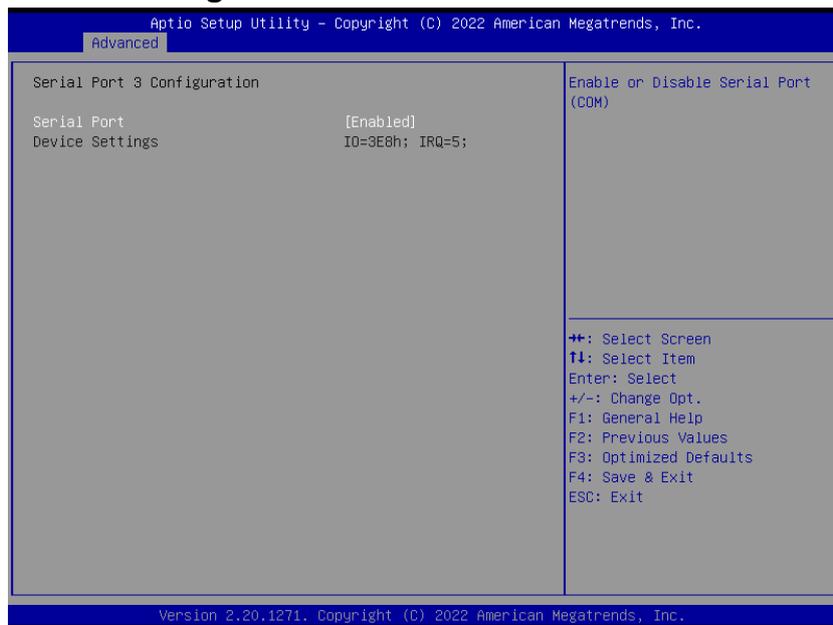


| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.6.4 Serial Port 4 Configuration

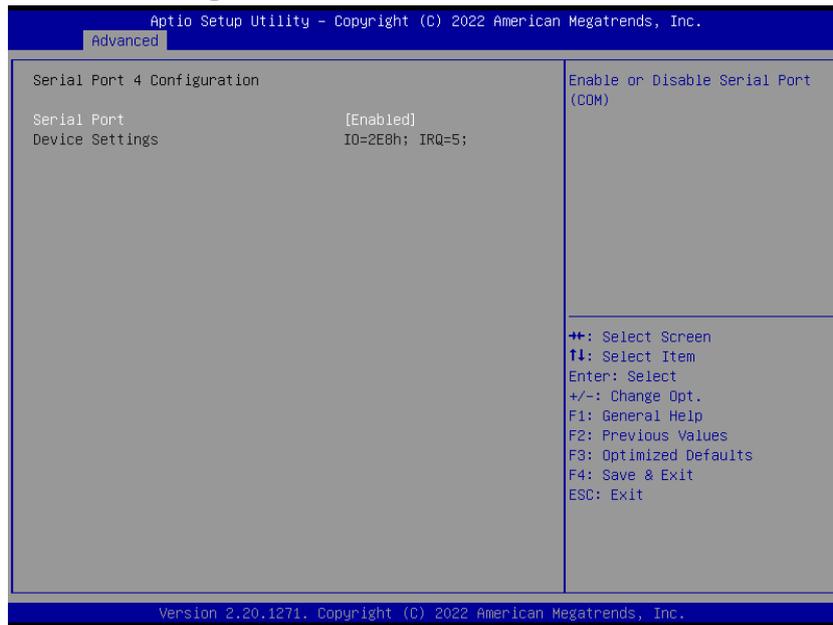


| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.6.5 Serial Port 5 Configuration

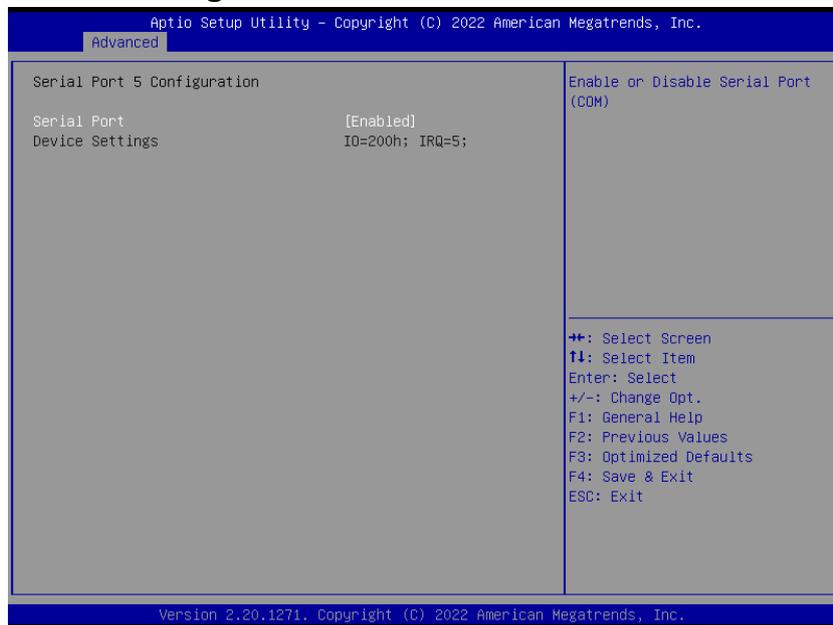


| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.6.6 Serial Port 6 Configuration

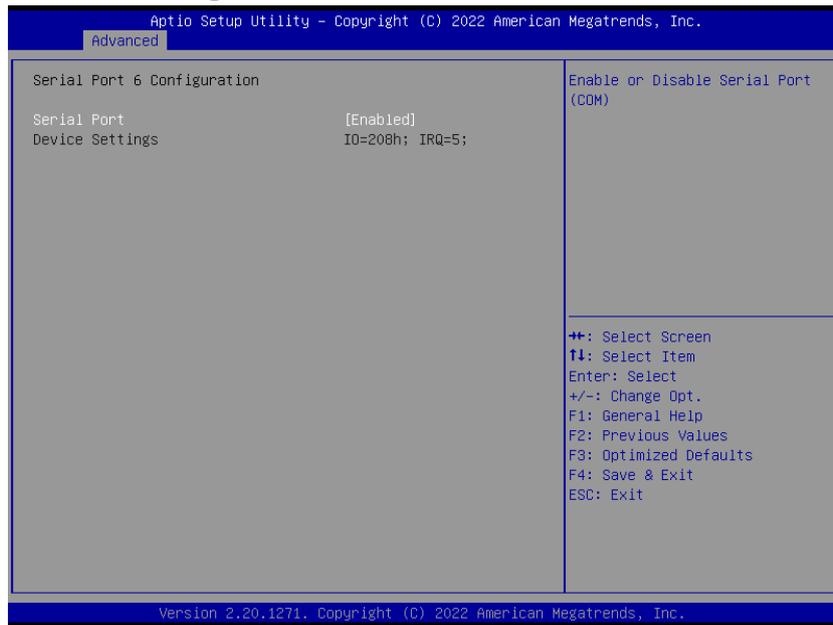


| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.7 EC 8528 HW monitor

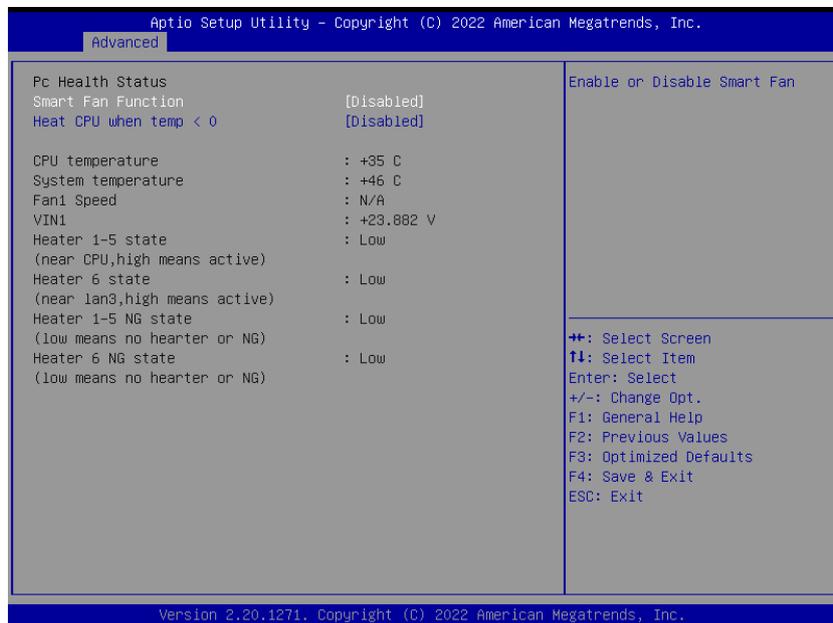


| Item | Options | Description |
|------------------------|-------------------------------|--|
| Smart Fan Function | Disabled[Default], Enabled | Enabled or Disable Smart Fan |
| Heat CPU when temp < 0 | Disabled[Default], Enabled | Turn on heater when CPU temperature below 0degree C before system boot up. |

3.6.2.8 S5 RTC Wake Settings

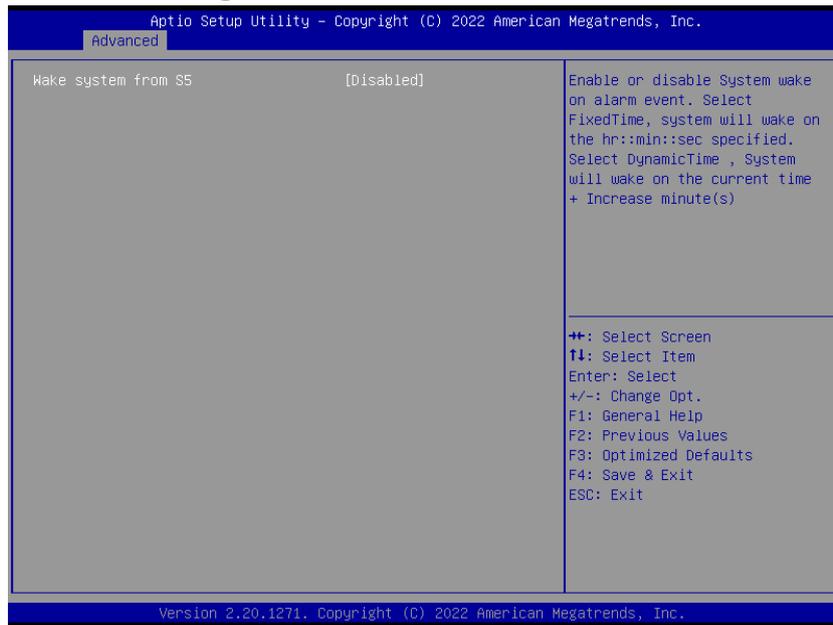


| Item | Options | Description |
|---------------------|--|--|
| Wake system from S5 | Disabled[Default], Fixed Time Dynamic Time | Enabled or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s) |

3.6.2.9 Serial Port Console Redirection

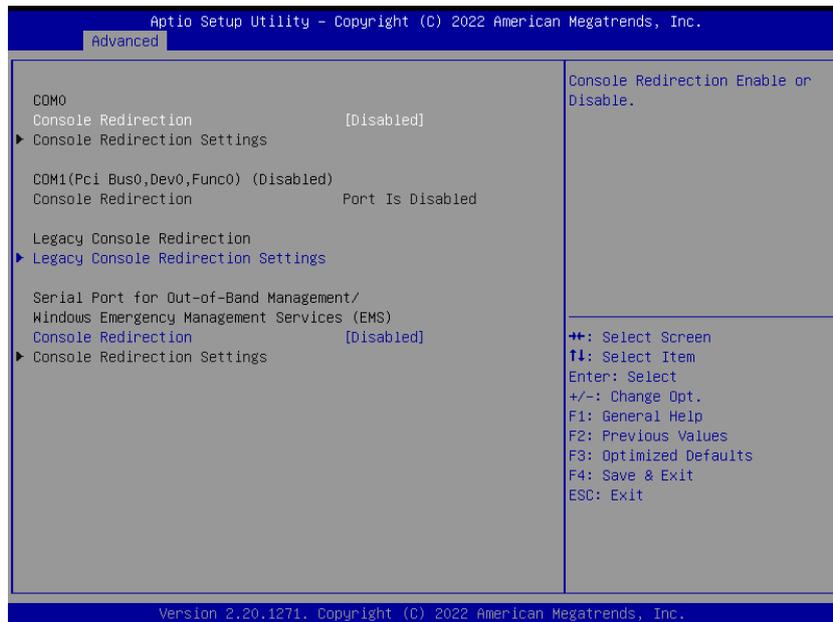


| Item | Option | Description |
|---------------------|-------------------------------|---|
| Console Redirection | Disabled[Default], Enabled | Console Redirection Enabled or Disable. |

3.6.2.9.1 Legacy Serial Redirection Port

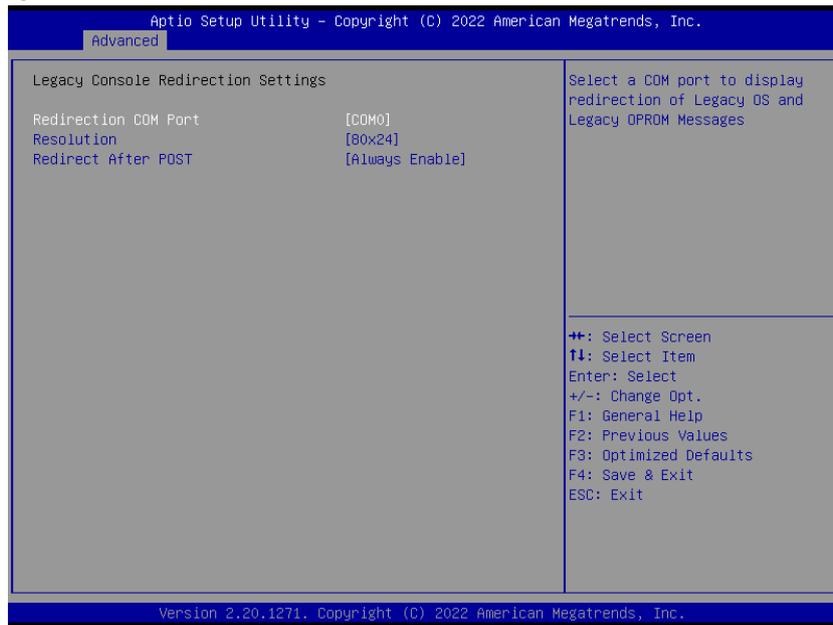

| Item | Option | Description |
|----------------------|---------------------------------------|--|
| Redirection COM Port | COM0 | Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages |
| Resolution | 80x24[Default], 80x25 | On Legacy Os, the Number of Rows and Columns supported redirection |
| Redirect After POST | Always Enable[Default], BootLoader | When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When Always Enable is selected, then Legacy Console Redirection is enabled for legacy OS. Default setting for this option is set to Always Enable. |


3.6.2.10 USB Configuration

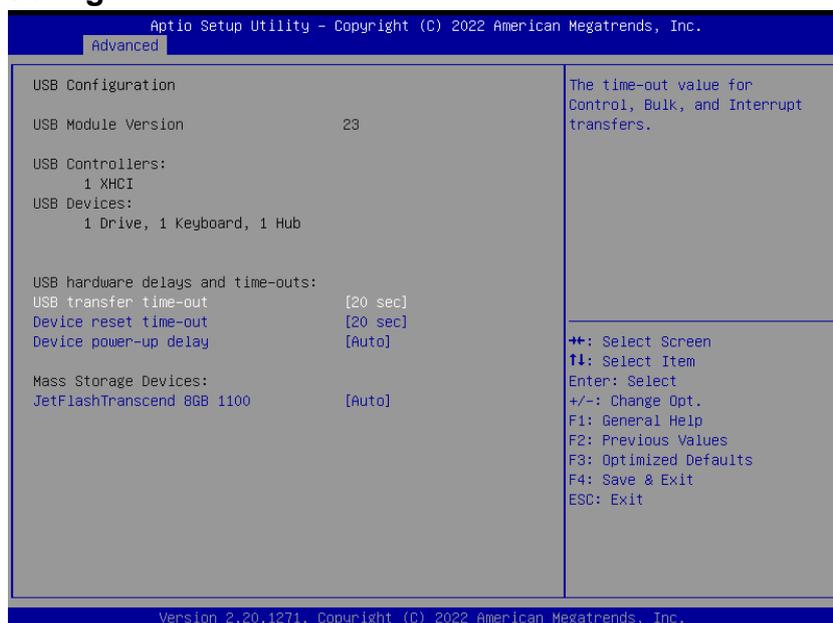


SLP-WHG-TSN

| Item | Options | Description |
|-------------------------------|--|--|
| USB transfer time-out | 1 sec 5 sec 10 sec 20 sec[Default] | The time-out value for Control, Bulk, and Interrupt transfers. |
| Device reset time-out | 10 sec 20 sec[Default] 30 sec 40 sec | USB mass storage device Start Unit command time-out. |
| Device power-up delay | Auto[Default] Manual | Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken form Hub descriptor. |
| JetFlashTranscend 8GB 1100 | Auto[Default] Floppy Forced FDD Hard Disk CD-ROM | Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drive with no media will be emulated according to a drive type. |


3.6.2.11 NVMe controller and Drive information

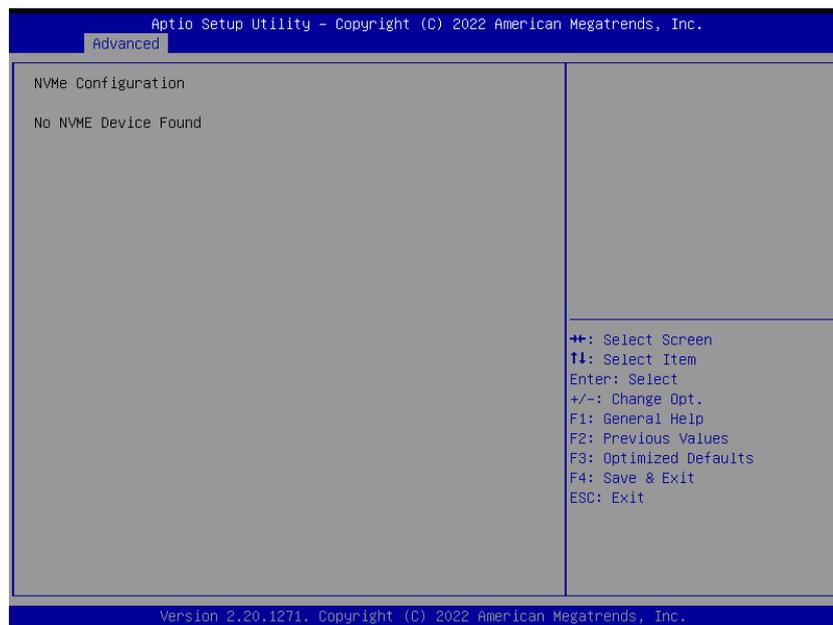

3.6.2.12 Network Stack Configuration

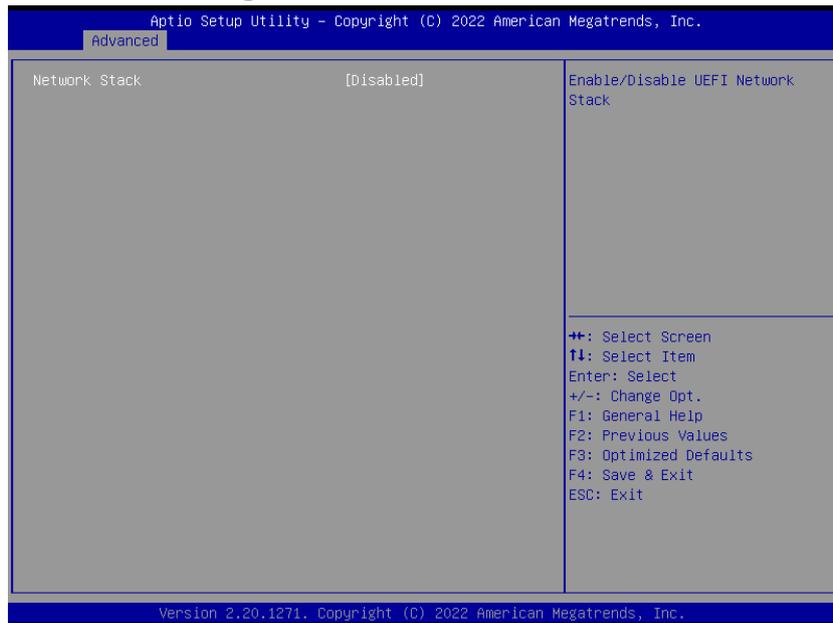

3.6.3 Chipset

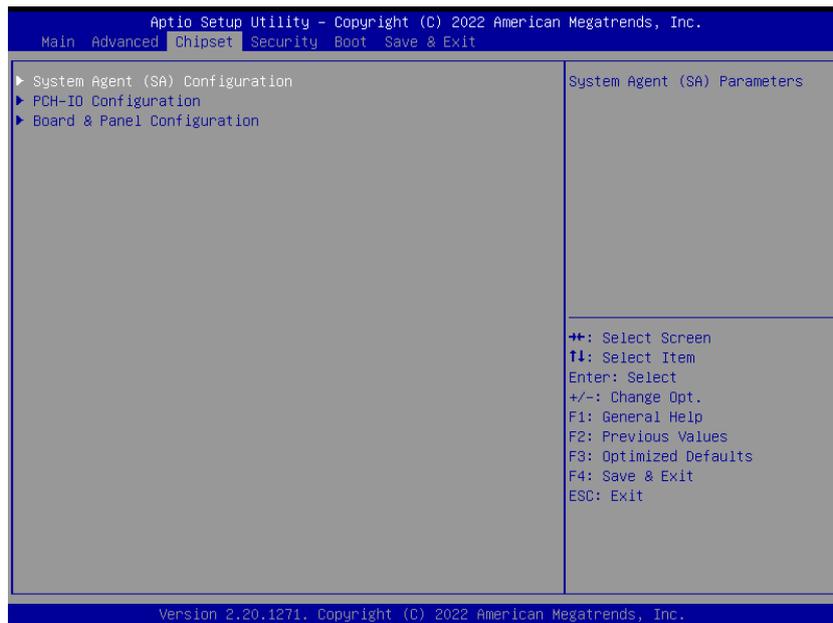


3.6.3.1 System Agent (SA) Configuration




| Item | Option | Description |
|------|------------------------------|------------------|
| VT-d | Disabled Enabled[Default] | VT-d capability. |

3.6.3.1.1 Memory Configuration

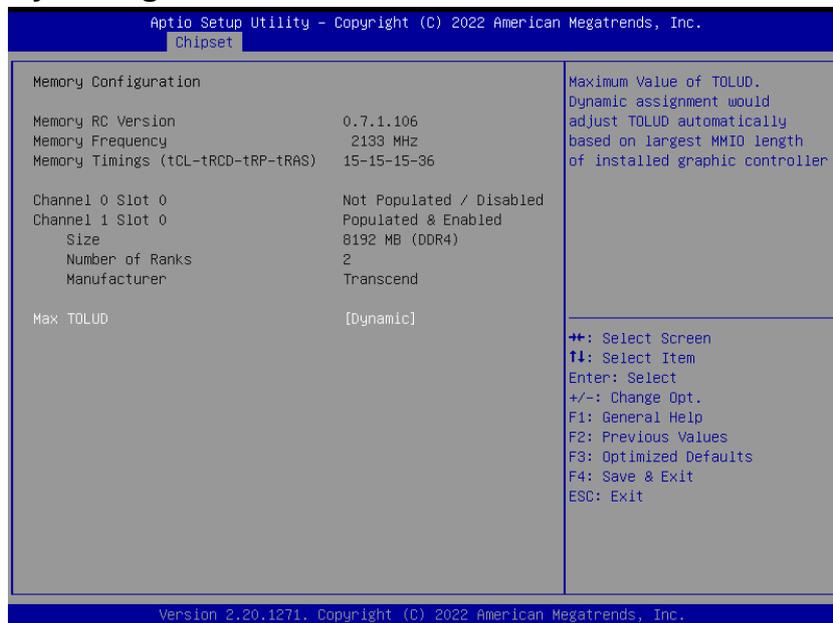


| Item | Option | Description |
|-----------|--|--|
| Max TOLUD | Dynamic[Default]/ 1GB/1.25GB/1.5GB/ 1.75 GB/2 GB/2.25 GB/ 2.5 GB/2.75 GB/3 GB | Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller |

3.6.3.1.2 Graphics Configuration

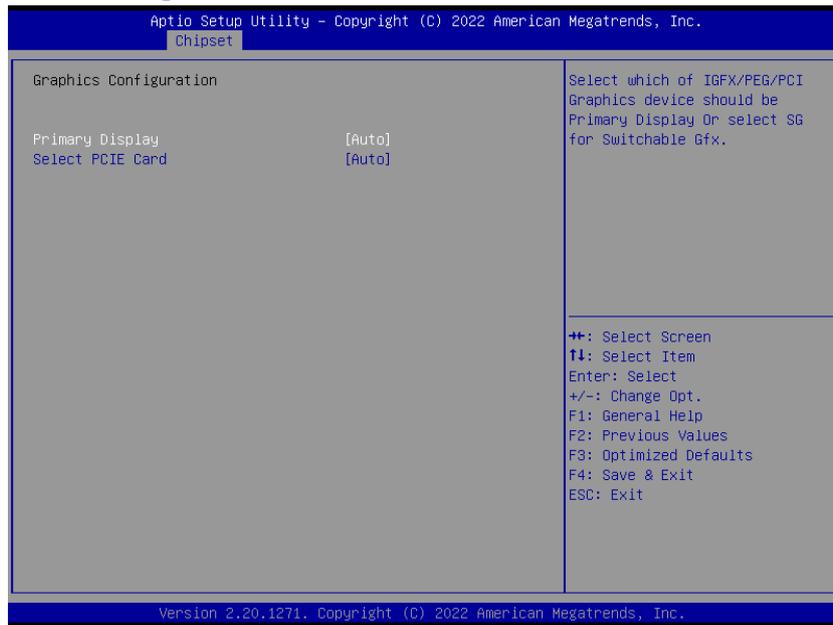

| Item | Option | Description |
|-------------------------|--|--|
| Primary Display | Auto[Default]/ IGFX/PEG/PCI/SG | Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx. |
| Select PCIE Card | Auto[Default] Elk Creek 4 PEG Eval | Select the card used on the platform Auto: Skip GPIO based Power Enable to dGPU Elk Creek 4: DGPU Power Enable = ActiveLow PEG Eval: DGPU Power Enable = ActiveHigh |


3.6.3.2 PCH-IO Configuration

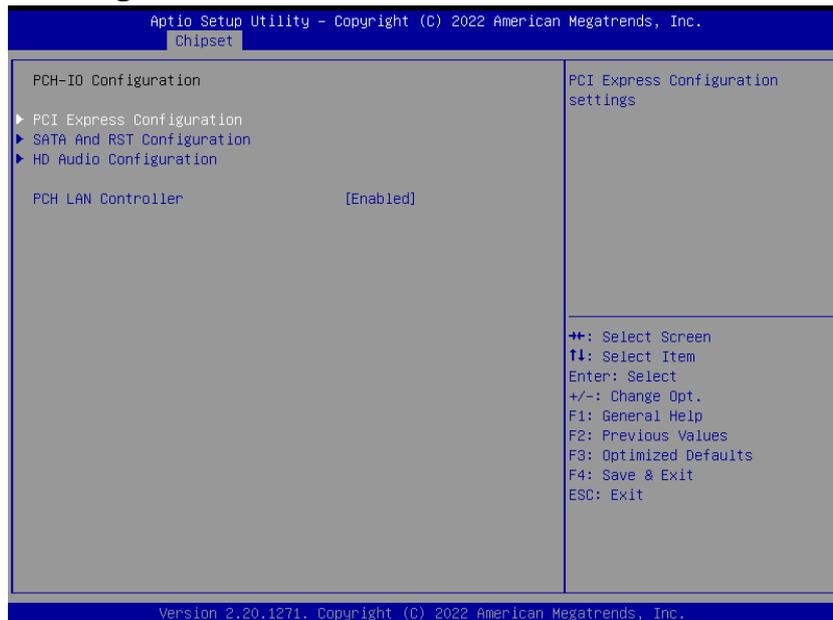

SLP-WHG-TSN


| Item | Option | Description |
|--------------------|------------------------------|-----------------------------|
| PCH LAN Controller | Enabled[Default] Disabled | Enable/Disable onboard NIC. |

3.6.3.2.1 PCI Express Configuration

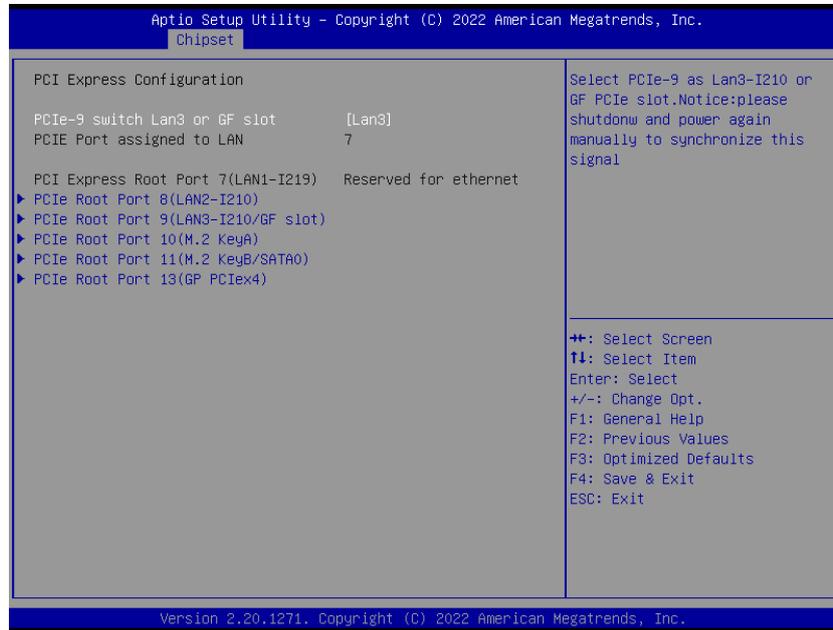


| Item | Option | Description |
|-------------------------------|---------------------------|--|
| PCIe-9 switch Lan3 or GF slot | Lan3 [Default] GF slot | Select PCIe-9 as Lan3-1210 or GF PCIe slot Notice:please shutdown and power again manually to synchronize this signal |

3.6.3.2.1.1 PCIe Root Port 8(LAN2-I210)

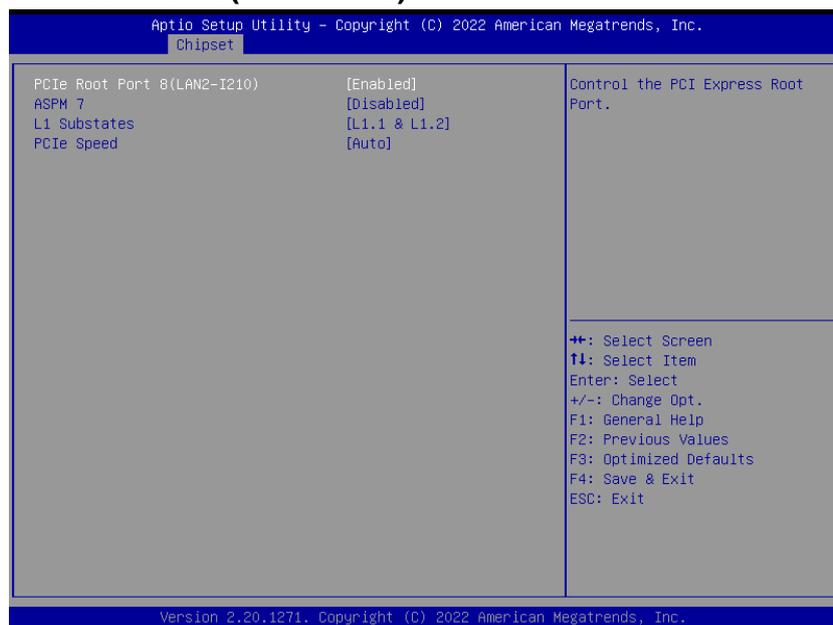

| Item | Option | Description |
|-------------------------------------|--|--|
| PCIe Root Port 8 (LAN2-I210) | Disabled Enabled[Default], | Control the PCI Express Root Port. |
| ASPM 7 | Disabled[Default] L0s L1 L0sL1 Auto, | Set the ASPM Level: Force L0s - Force all links to L0s State AUTO - BIOS auto configure DISABLE - Disables ASPM. |
| L1 Substates | Disabled L1.1 L1.1 & L1.2[Default], | PCI Express L1 Substates settings. |
| PCIe Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PCIe speed. |

3.6.3.2.1.2 PCIe Root Port 9(LAN3-I210/GF slot)

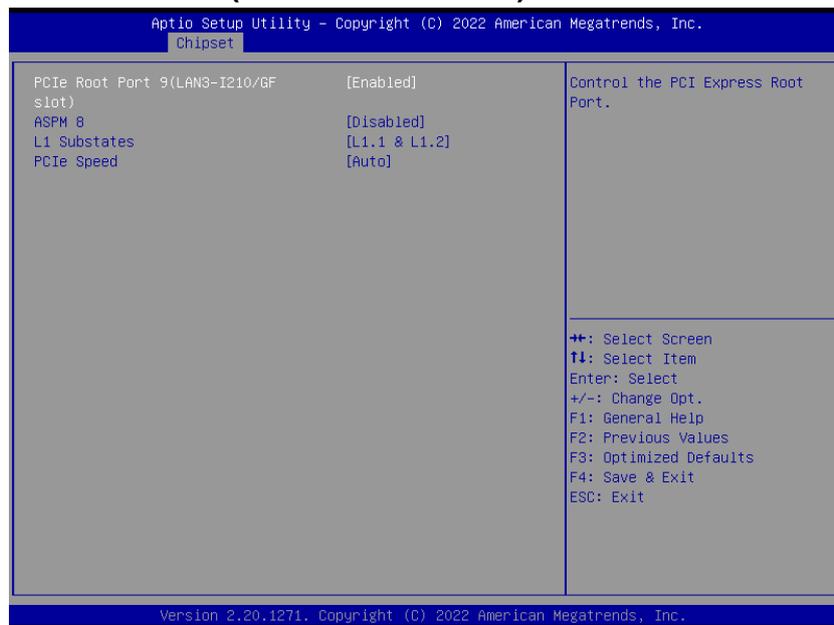


| Item | Option | Description |
|---|--|--|
| PCIe Root Port 9 (LAN3-I210/GF slot) | Disabled Enabled[Default], | Control the PCI Express Root Port. |
| ASPM 8 | Disabled[Default] L0s L1 L0sL1 Auto, | Set the ASPM Level: Force L0s - Force all links to L0s State AUTO - BIOS auto configure DISABLE - Disables ASPM. |
| L1 Substates | Disabled L1.1 L1.1 & L1.2[Default], | PCI Express L1 Substates settings. |

SLP-WHG-TSN


| | | |
|-------------------|--|-----------------------|
| PCIe Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PCIe speed. |
|-------------------|--|-----------------------|

3.6.3.2.1.3 PCIe Root Port 10(M.2 KeyA)

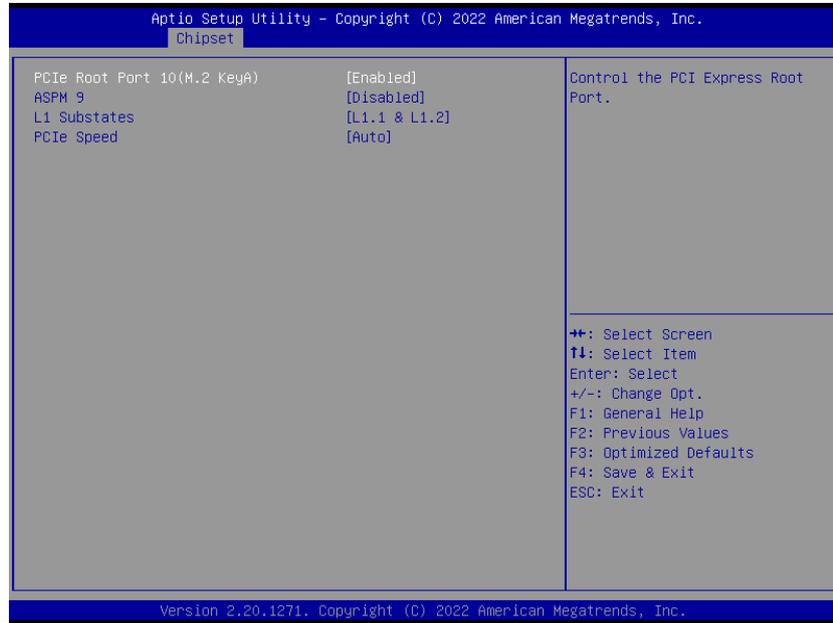

| Item | Option | Description |
|-------------------------------------|--|--|
| PCIe Root Port 10 (M.2 KeyA) | Disabled Enabled[Default], | Control the PCI Express Root Port. |
| ASPM 9 | Disabled[Default] L0s L1 L0sL1 Auto, | Set the ASPM Level: Force L0s - Force all links to L0s State AUTO - BIOS auto configure DISABLE - Disables ASPM. |
| L1 Substates | Disabled L1.1 L1.1 & L1.2[Default], | PCI Express L1 Substates settings. |
| PCIe Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PCIe speed. |

3.6.3.2.1.4 PCIe Root Port 11(M.2 KeyB/SATA0)

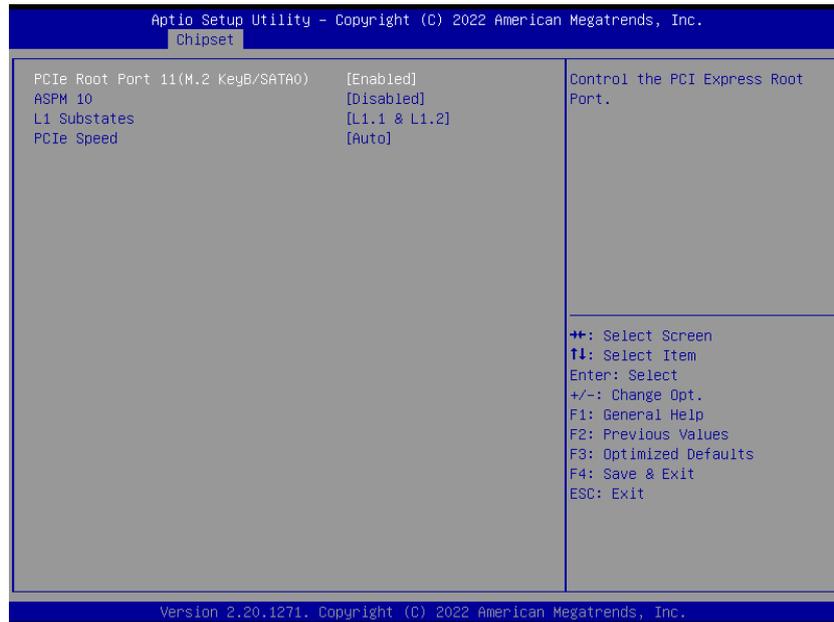


| Item | Option | Description |
|---|---|--|
| PCIe Root Port 11 (M.2 KeyB/SATA0) | Disabled Enabled[Default], | Control the PCI Express Root Port. |
| ASPM 10 | Disabled[Default] L0s L1 L0sL1 Auto, | Set the ASPM Level: Force L0s - Force all links to L0s State AUTO - BIOS auto configure DISABLE - Disables ASPM. |
| L1 Substates | Disabled L1.1 L1.1 & L1.2[Default], | PCI Express L1 Substates settings. |
| PCIe Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PCIe speed. |

3.6.3.2.1.5 PCIe Root Port 13(GP PCIe4)




| Item | Option | Description |
|-------------------------------------|--|--|
| PCIe Root Port 13 (GP PCIe4) | Disabled Enabled[Default], | Control the PCI Express Root Port. |
| ASPM 12 | Disabled[Default] L0s L1 L0sL1 Auto, | Set the ASPM Level: Force L0s - Force all links to L0s State AUTO - BIOS auto configure DISABLE - Disables ASPM. |
| L1 Substates | Disabled L1.1 L1.1 & L1.2[Default], | PCI Express L1 Substates settings. |
| PCIe Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PCIe speed. |

3.6.3.2.2 SATA And RST Configuration

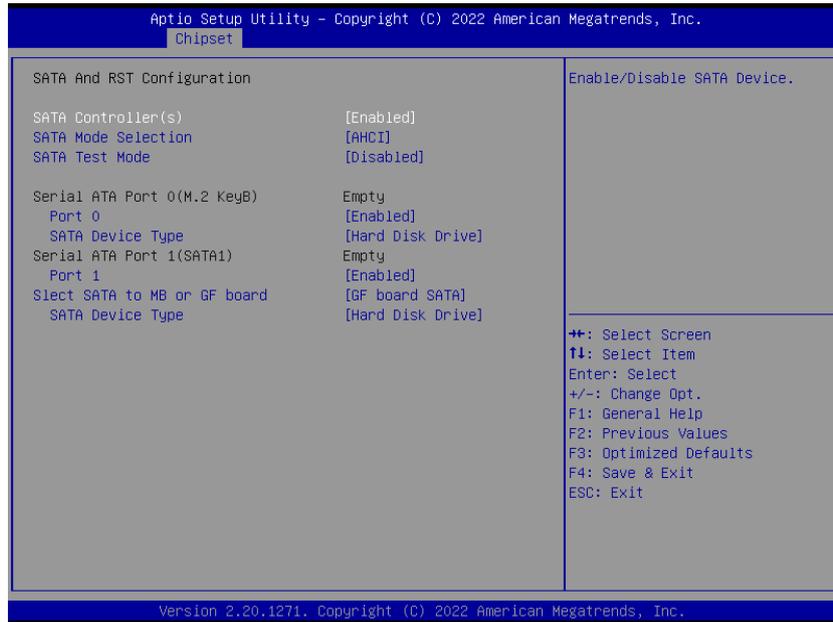


| Item | Options | Description |
|--------------------------------------|---|--|
| SATA Controller(s) | Enabled[Default] Disabled, | Enable/Disable SATA Device. |
| SATA Mode Selection | AHCI[Default] RAID | Determines how SATA controller(s) operate. |
| SATA Test Mode | Enabled Disabled[Default], | Test Mode Enable/Disable (Loop Back). |
| Port0 | Disabled, Enabled[Default] | Enable or Disable SATA Port. |
| SATA Device Type | Hard Disk Drive Solid State Drive[Default] | Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. |
| Port1 | Disabled, Enabled[Default] | Enable or Disable SATA Port. |
| Select SATA to MB or GF board | GF board SATA[Default] MB SATA | Select SATA to MB or GF board |
| SATA Device Type | Hard Disk Drive[Default] Solid State Drive | Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. |

3.6.3.2.3 HD Audio Configuration

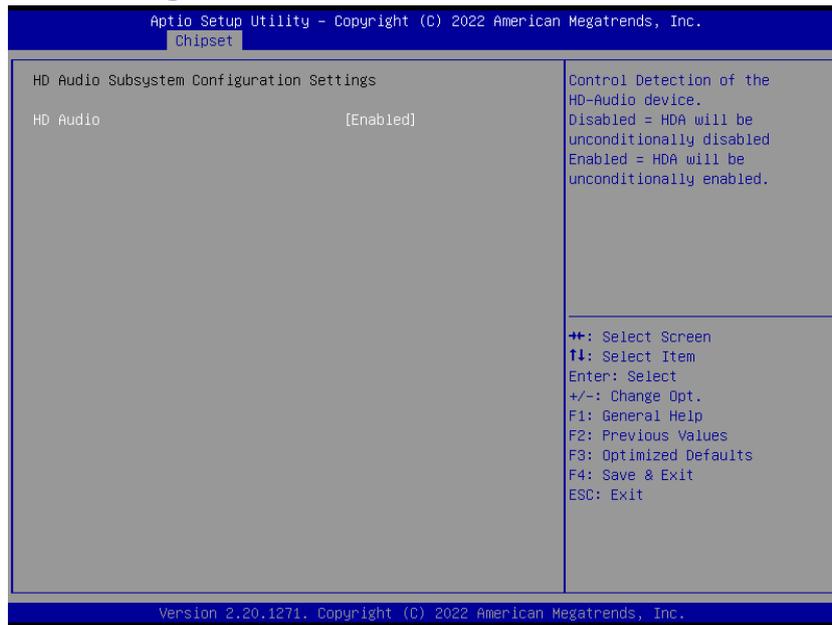


| Item | Option | Description |
|----------|-------------------------------|--|
| HD Audio | Disabled Enabled[Default], | Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled. |

3.6.3.3 Board & Panel Configuration

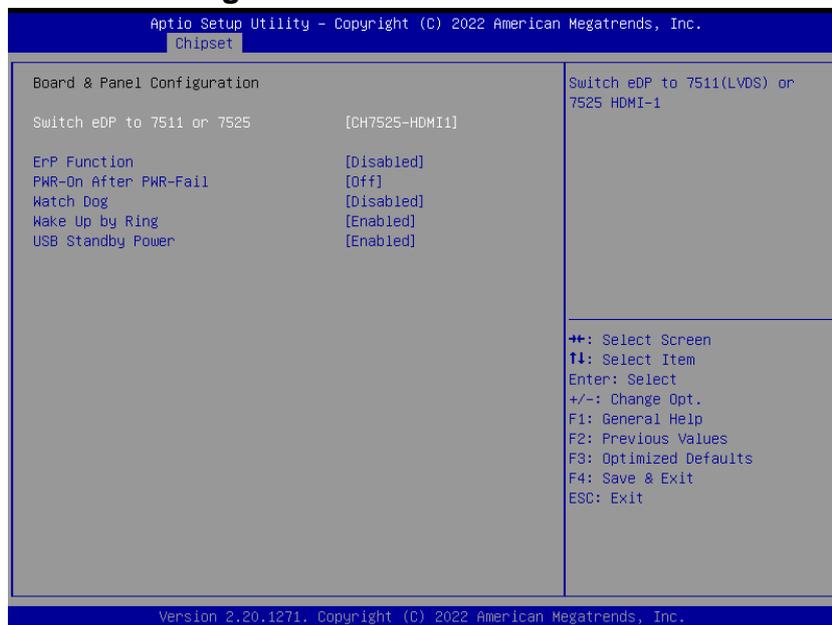

| Item | Option | Description |
|----------------------------|---|--|
| Switch eDP to 7511 or 7525 | CH7511-LVDS CH7525-HDMI1[Default] | Switch eDP to 7511(LVDS) or 7525 HDMI-1 |
| ErP Function | Disabled[Default], Enabled | ErP Function (Deep S5). |
| PWR-On After PWR-Fail | Off[Default], On Last State | AC loss resume. |
| Watch Dog | Disabled[Default],/ 30 sec/40 sec/50 sec/ 1 min/2 min/10 min/ 30 min | Select WatchDog |
| Wake Up by Ring | Disabled Enabled[Default], | Wake Up by Ring from S3/S4/S5 |
| USB Standby Power | Disabled Enabled[Default], | Enabled/Disabled USB Standby Power during S3/S4/S5 |

3.6.4 Security

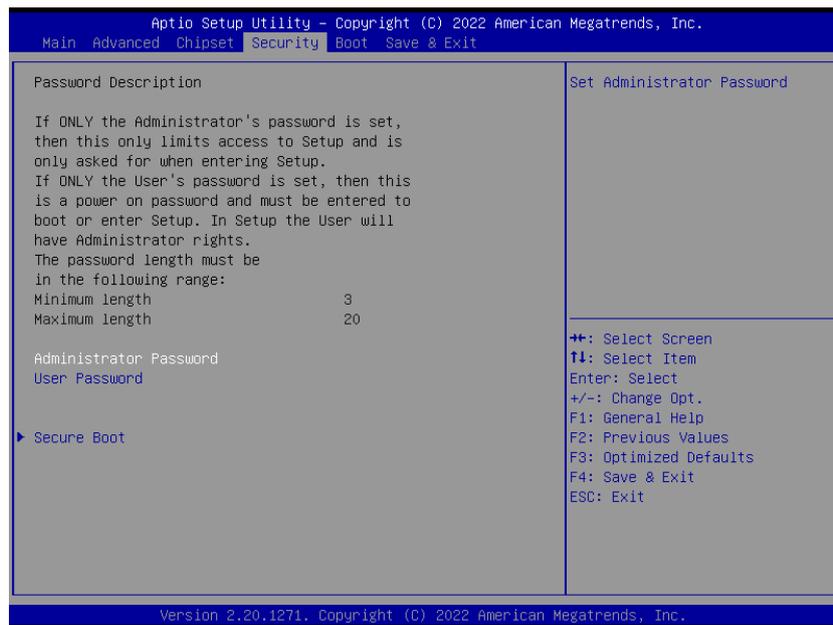


- **Administrator Password**

Set Administrator Password

- **User Password**


Set User Password

3.6.4.1 Secure Boot

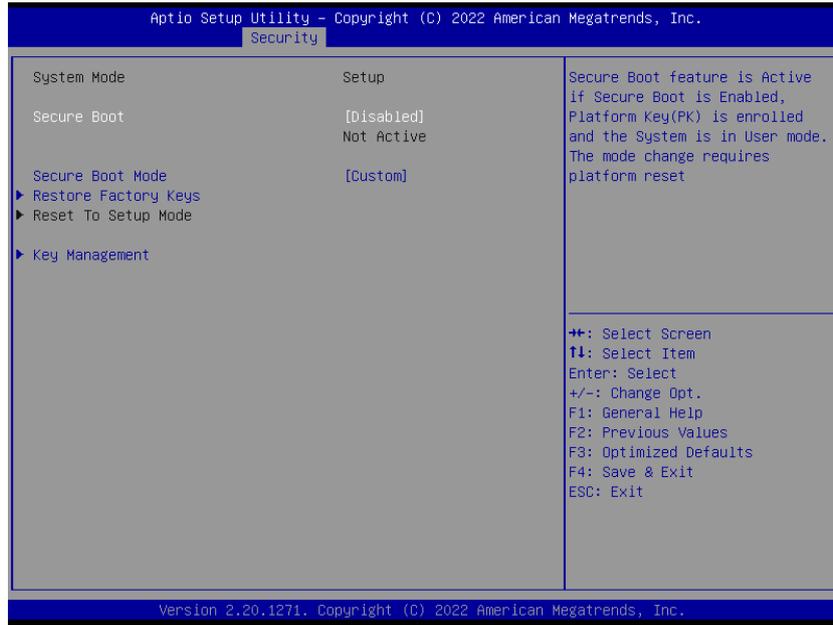


| Item | Option | Description |
|-------------------------|-------------------------------|---|
| Secure Boot | Disabled Enabled[Default], | Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset |
| Secure Boot Mode | Standard Custom[Default], | Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication |


3.6.4.1.1 Restore Factory Keys

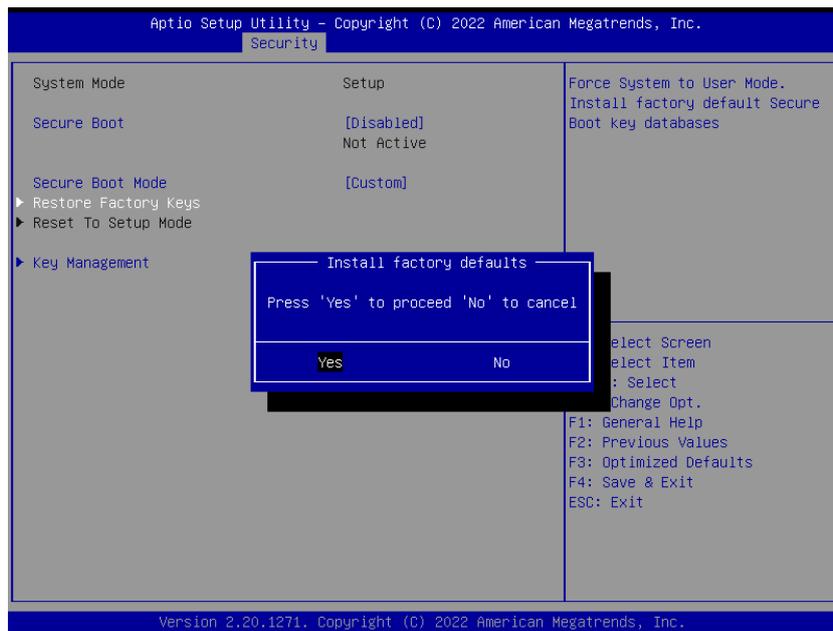

3.6.4.1.2 Reset To Setup Mode

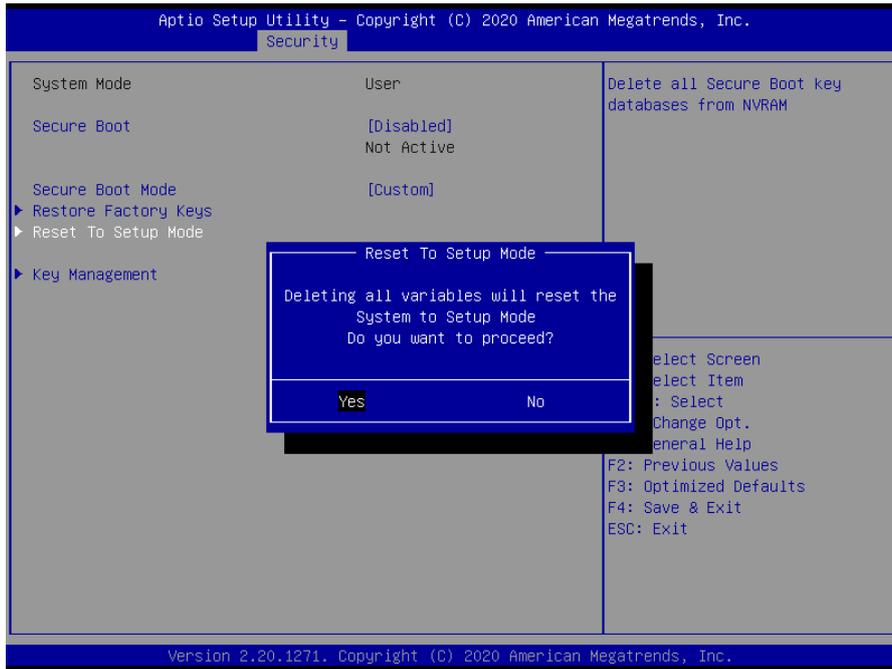


3.6.4.1.3 Key Management

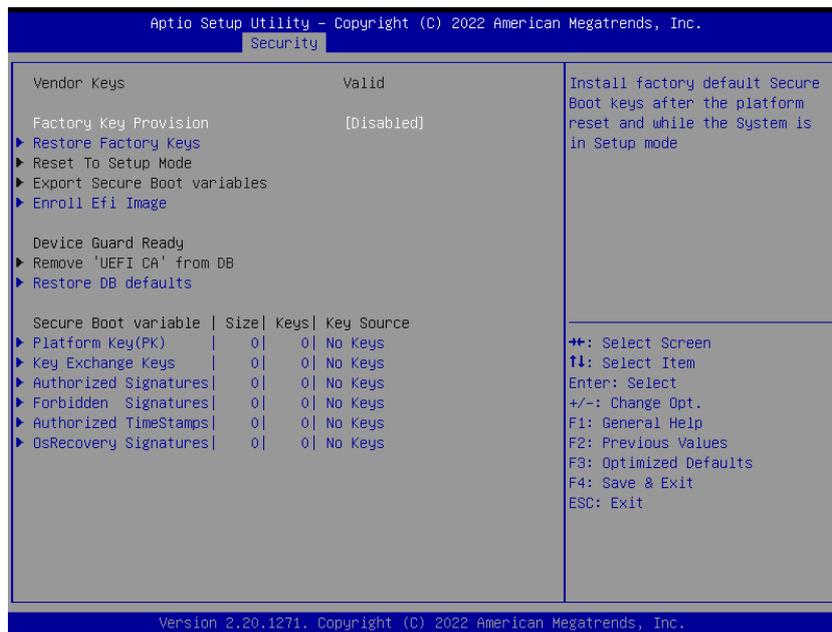


| Item | Option | Description |
|-----------------------|------------------------------|---|
| Factory Key Provision | Disabled[Default] Enabled | Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode |


3.6.5 Boot

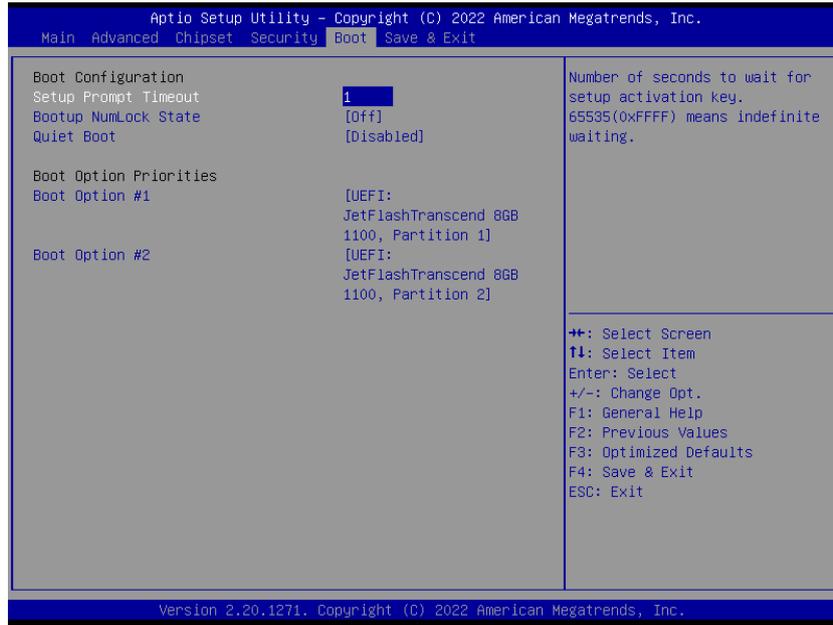

| Item | Option | Description |
|----------------------|------------------------------|---|
| Setup Prompt Timeout | 1 | Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting. |
| Bootup NumLock State | On Off[Default] | Select the Keyboard NumLock state |
| Quiet Boot | Disabled[Default] Enabled | Enables or disables Quiet Boot option |
| Boot Option #1 | Sets the system boot order. | |
| Boot Option #2 | Sets the system boot order. | |

3.6.6 Save and Exit

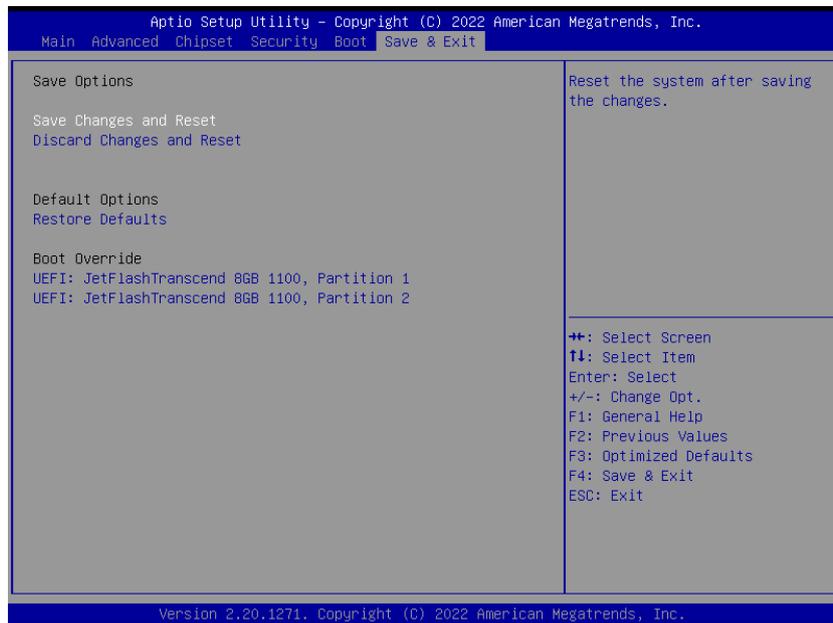

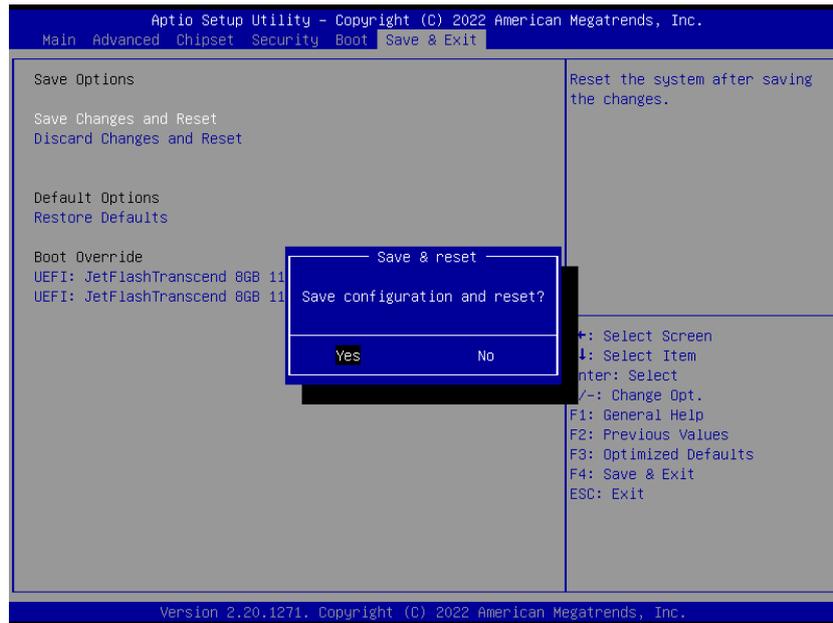

3.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

3.6.6.2 Discard Changes and Reset

Reset system setup without saving any changes.

3.6.6.3 Restore Defaults

Restore/Load Default values for all the setup options.

3.6.6.4 Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.

