

UB-A100

UWB Anchor

Quick Reference Guide

1st Ed – 30 July 2019

Copyright Notice

Copyright © 2019 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Content

1. Getting Started	4
1.1 Safety Precautions	4
1.2 Packing List.....	4
1.3 System Specifications	5
1.4 System Overview	7
1.4.1 Top View.....	7
1.4.2 Rear View	7
1.5 System Dimensions	8

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x Power Cord
- 1 x Adapter
- 1 x UWB Antenna
- 1 x Wi-Fi Antenna
- 2 x Bracket
- 1 x Screws pack



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

UWB RF Specifications (UWB)	
Chip	Decawave DW1000
Frequency	Channel 1 : 3.25~3.75 GHz for USA Channel 2 : 3.75~4.25 GHz for USA, Europe Channel 3 : 4.25~4.75 GHz for USA, Europe, Taiwan Channel 5 : 6.25~6.75 GHz for China
Physical rate	110K bps 850K bps 6.8 Mbps
Power output (25°C)	-41.3 dBm
Antenna peak gain	4.2dBi
2.4 Wi-Fi RF Specifications	
Chip	AI7688H
Frequency	802.11b/g/n
Antenna	3dBi
Software	
UWB operating mode	TDoA
Accuracy	30cm
Network mode	Bridge mode
WLAN operating mode	AP Station AP + Station
Protocol	DHCP
Security	WPA WPA2
External I/O	
LAN Port	1 x RJ-45 (10/100Mbps), support Powered LAN (802.3af/at)
Indicator Light	Blue : Power When power on, LED indicator remains lit. Green : LAN When the data of Ethernet is transmitted, the LED indicator flashes. Green : UWB When UWB work normally, the LED indicator flashes. Orange : Wi-Fi When the data is transmitted, the LED indicator flashes.
Others	2 x Reset button

UB-A100

	1 x RP-SMA(F) for UWB antenna 1 x RP-SMA(F) for Wi-Fi antenna 1 x USB
Mechanical	
Power Type	AT (*whcih means no power switch or button on chassis)
Power Connector Type	1 x DC-in
Power Requirement	+12V DC-in Or Powered LAN (802.3af/at)
Mounting	Wall mount VESA 75 x 75
Dimension	156 x 106 x 25mm
Weight	0.5kg
Color	Black, Blue
Fanless	Fanless
Reliability	
EMI Test	CE/FCC ClassB
Safety	UL/CB design compatible
Operating Temperature	-20°C~55°C
Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Storage Temperature	-40°C~90°C





Note: Specifications are subject to change without notice.

1.4 System Overview

1.4.1 Top View



1.4.2 Rear View


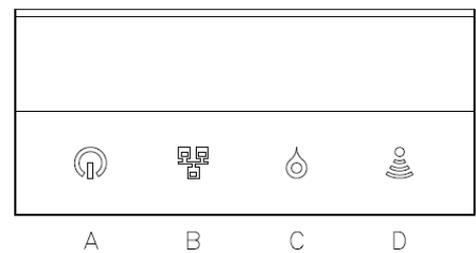
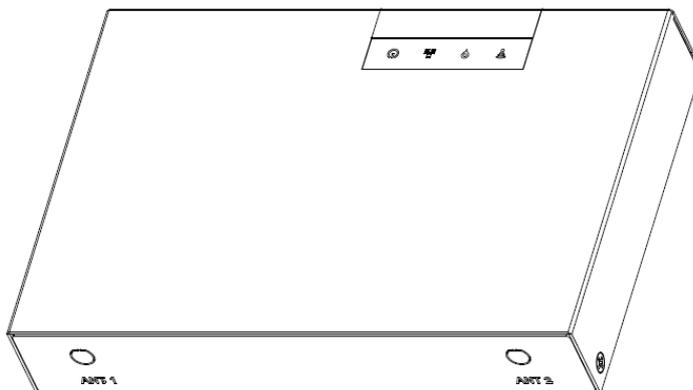


A : Power
 B : LAN
 C : UWB
 D : Wi-Fi

Connector

Label	Function
PWR	DC-IN +12V
ETH	RJ-45 Ethernet
USB	USB 2.0 connector
RST 1/2	Reset
ANT 1	Wi-Fi Antenna connector
ANT 2	UWB Antenna connector

1.5 System Dimensions

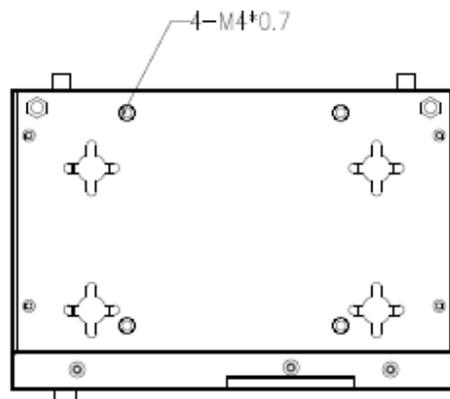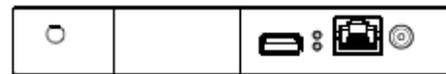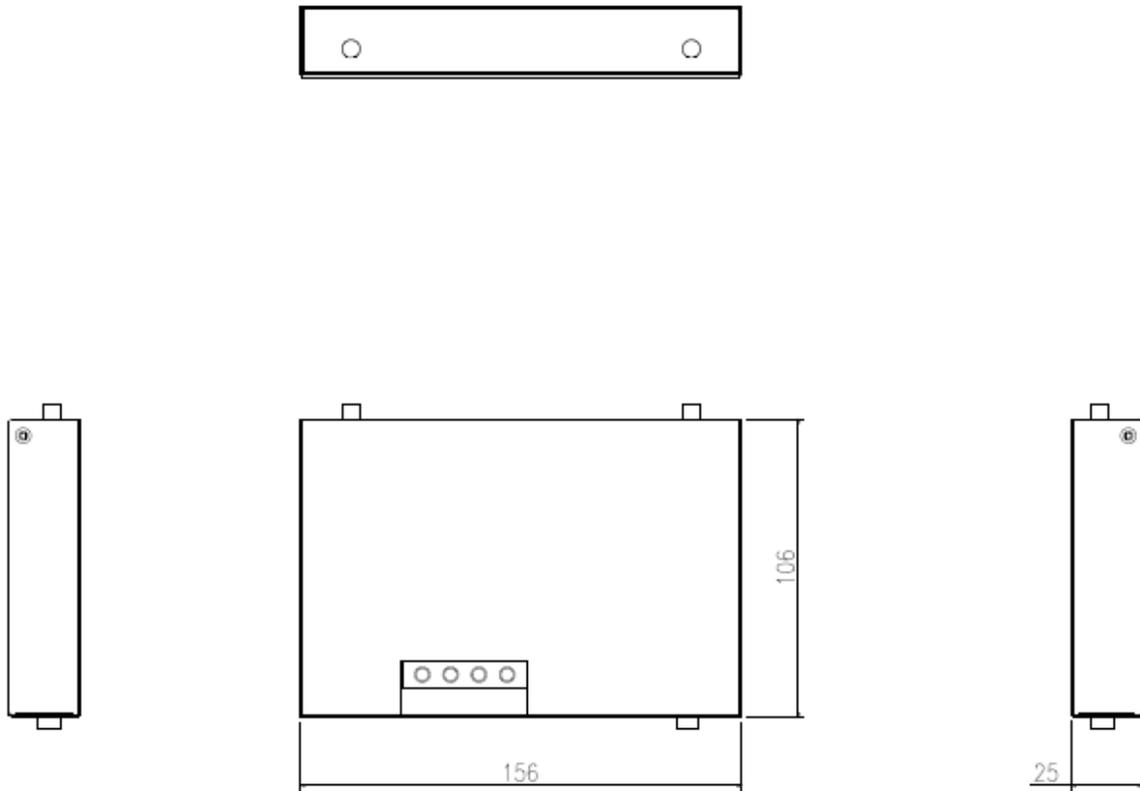

(Unit: mm)

